


# TABLE OF CONTENTS

## 2000 Z 120

(Model No. S2000ZAAAAUS)

FRONT SUSPENSION AND SKI ASSEMBLY . . . . .	1
STEERING POST AND TIE ROD ASSEMBLY . . . . .	2
DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES . . . . .	3
SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY . . . . .	4
REAR SUSPENSION ARM ASSEMBLIES . . . . .	5
CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY . . . . .	6
HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY . . . . .	7
BELLY PAN AND EXHAUST ASSEMBLIES . . . . .	8
GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY . . . . .	9
ENGINE AND RELATED PARTS . . . . .	10
AIR CLEANER ASSEMBLY . . . . .	11
CARBURETOR . . . . .	12
CYLINDER AND CRANKCASE . . . . .	13
PISTON AND CRANKSHAFT . . . . .	14
RECOIL STARTER . . . . .	15
THROTTLE CONTROL ASSEMBLY . . . . .	16
MAGNETO . . . . .	17
RELATED ITEMS . . . . .	Back Cover


■ NOTE: The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. Underlined part numbers are new for the 2000 model year.

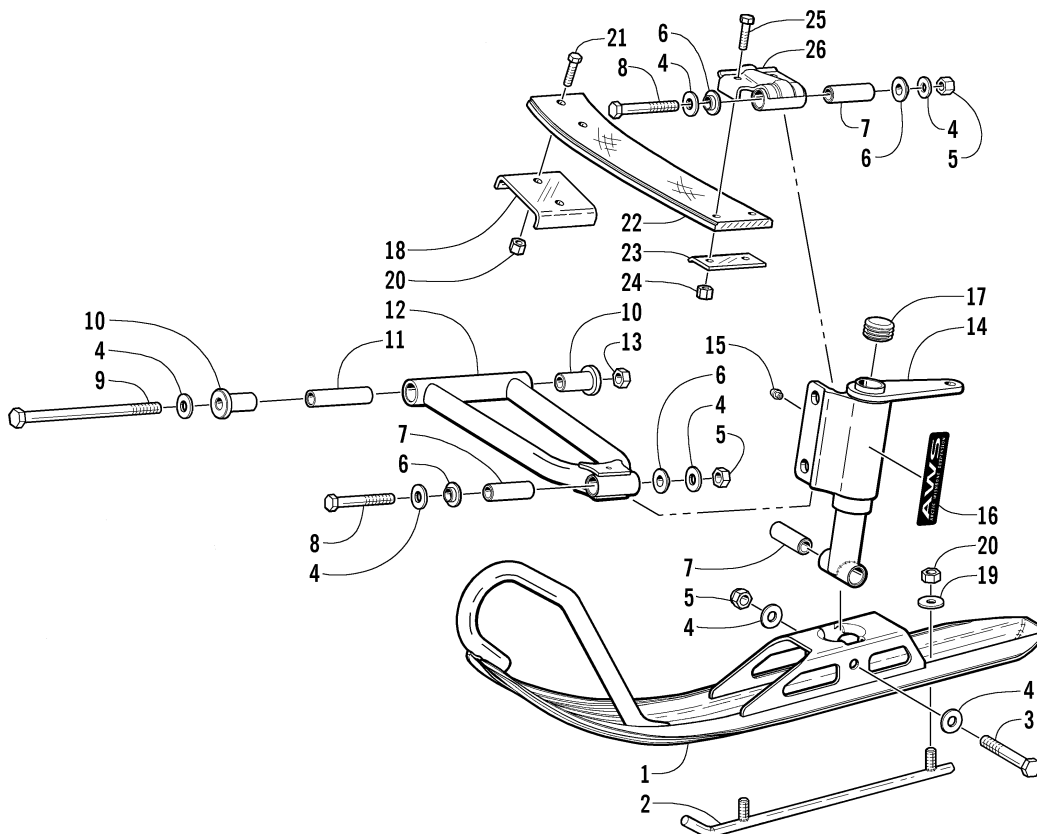

## FRONT SUSPENSION AND SKI ASSEMBLY

0735-367


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0703-692	2	Ski	14	0703-690	2	Spindle Assembly (inc. 6 and 15)
2	0703-698	2	Wearbar	15	0623-010	2	• Fitting, Grease
3	8002-230	2	Screw, Cap	16	3611-677	2	Decal, "AWS" - Spindle
4	8050-277	14	Washer	17	0623-831	2	Cap, Spindle
5	8040-486	6	Nut, Lock	18	1603-350	2	Retainer, Spring
6	0603-647	8	Insert, Spindle	19	8050-247	4	Washer
7	1603-365	6	Axle, Suspension	20	8040-426	8	Nut, Lock
8	8002-231	4	Screw, Cap	21	8002-132	4	Screw, Cap
9	0623-240	2	Screw, Cap	22	1603-344	2	Spring, Fiberglass
10	0603-861	4	Axle, Powder Metal	23	1603-367	2	Retainer, Spring
11	1603-394	2	Axle, Inner A-Arm	24	8040-366	4	Nut, Lock
12	0703-691	2	A-Arm	25	8002-042	4	Screw, Cap
13	0623-661	2	Nut, Crown Lock	26	0703-705	2	Bracket, Mounting - Spring

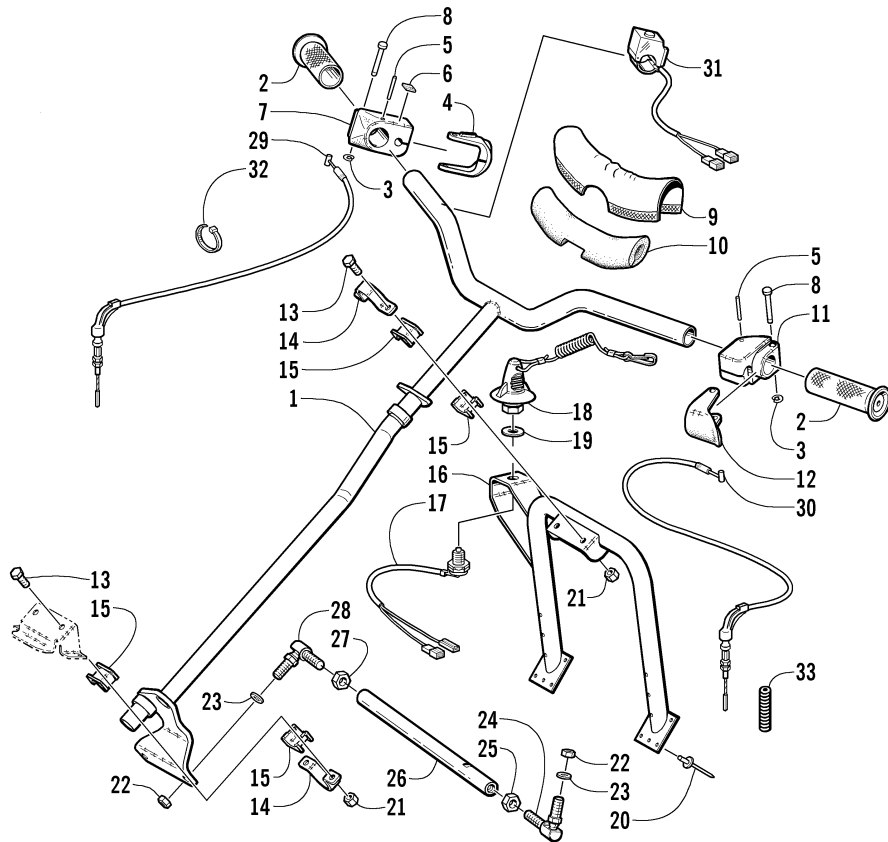

## STEERING POST AND TIE ROD ASSEMBLY

0735-373


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0703-693</u>	1	Post, Steering	18	<u>0630-139</u>	1	● Cord, Tether Switch
2	1606-765	2	Grip, Handle	19	8050-307	1	Washer
3	0123-231	2	Ring, Retaining	20	8060-484	10	Rivet
4	0302-085	1	Lever, Throttle	21	8040-366	4	Nut, Lock
5	8070-318	2	Pin, Spring	22	0623-696	4	Nut, Lock
6	0611-022	1	Decal, Engine Stop Switch	23	0623-044	4	Washer
7	0302-165	1	Control, Throttle	24	<u>1603-374</u>	2	Rod End - Right
8	0123-230	2	Pin	25	0123-191	2	Nut, Hex - Right
9	<u>0605-502</u>	1	Cover, Handlebar Pad	26	0605-452	2	Tube, Tie Rod
10	<u>0605-501</u>	1	Pad, Handlebar	27	0123-917	2	Nut, Hex - Left
11	0302-147	1	Housing, Brake	28	<u>1603-375</u>	2	Rod End - Left
12	0109-609	1	Lever, Brake	29	<u>0687-121</u>	1	Cable, Throttle
13	8002-040	4	Screw, Cap	30	<u>0687-122</u>	1	Cable, Brake
14	<u>0605-446</u>	2	Retainer, Bearing	31	0609-007	1	Switch, Engine Stop
15	<u>0605-444</u>	4	Bearing, Steering Post	32	0123-788	AR	Cable Tie - 7 in.
16	<u>1706-050</u>	1	Support, Steering Post	33	0623-360	1	Spring, Brake Cable
17	<u>0630-138</u>	1	Switch, Tether - Assembly (inc. 18)				

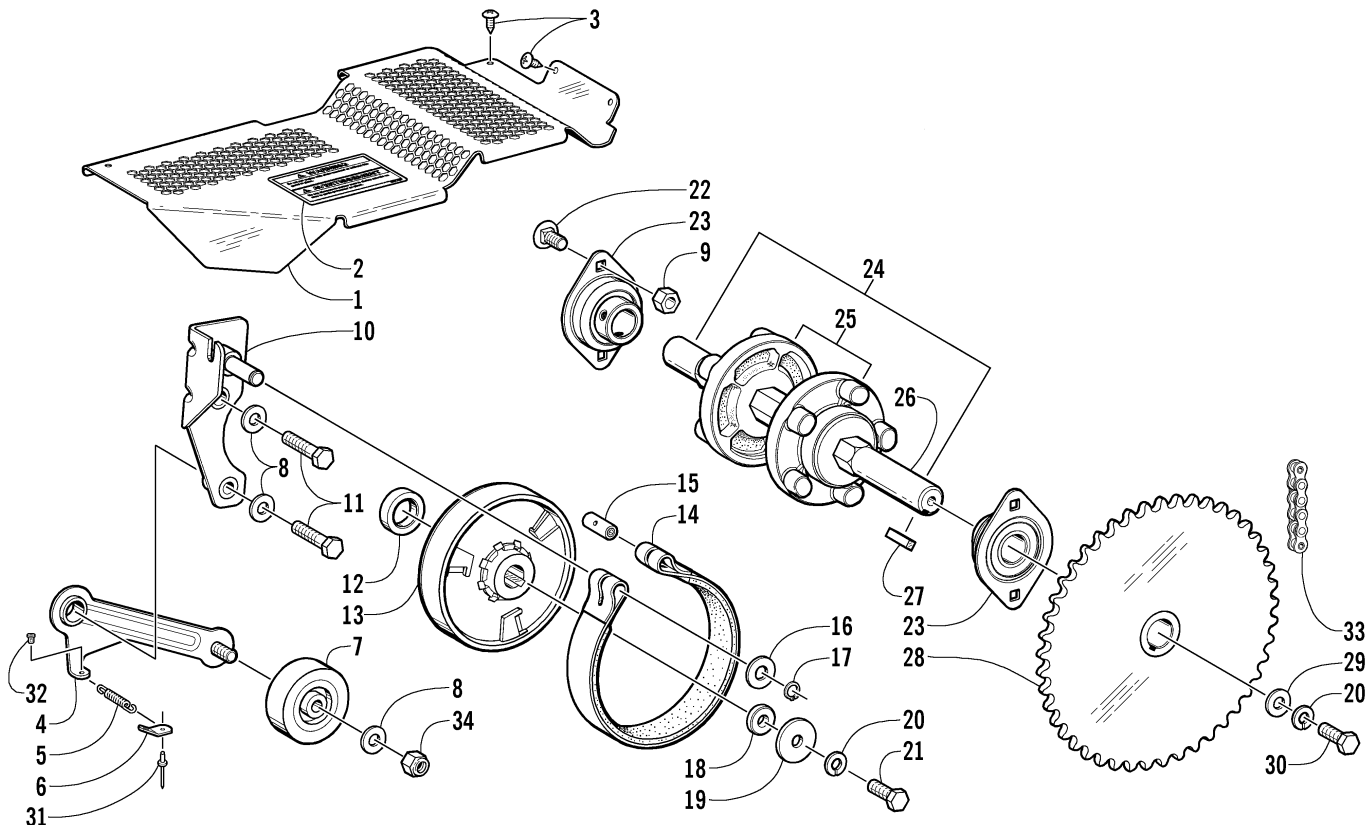

## DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES

0735-370

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1612-180	1	Shield, Clutch/Brake/Muffler	18	1602-027	1	Spacer, Clutch - Outer
2	3611-754	1	Decal, Warning - Guard	19	0123-260	1	Washer
3	0623-378	5	Screw, Self-Tapping	20	8051-242	2	Washer, Lock
4	0702-376	1	Tensioner, Chain	21	8004-132	1	Screw, Cap
5	1602-066	1	Spring, Tensioner - Chain	22	8011-130	4	Bolt, Carriage
6	2606-021	1	Tab, Spring Retainer	23	1602-023	2	Bearing, Drive Sprocket
7	1602-065	1	Roller, Chain Tensioner	24	0728-045	1	Track Drive Assembly (inc. 25 and 26)
8	8050-247	3	Washer	25	1602-016	2	• Sprocket, Track Drive
9	8040-426	4	Nut, Lock	26	1602-017	1	• Shaft, Drive Sprocket
10	0702-360	1	Bracket, Brake	27	0623-823	1	Key
11	8004-135	2	Screw, Cap	28	1602-018	1	Sprocket, Chain - Track Drive
12	1602-026	1	Spacer, Clutch - Inner	29	0123-019	1	Washer
13	1602-020	1	Clutch, Centrifugal	30	8002-131	1	Screw, Cap
14	1602-021	1	Band, Brake	31	8060-484	1	Rivet
15	1602-049	1	Pin, Retainer - Brake Cable	32	0623-868	1	Bushing, Snap
16	8050-277	1	Washer	33	1602-019	1	Chain, 76P
17	0623-821	1	Ring, Snap	34	8041-426	1	Nut, Lock

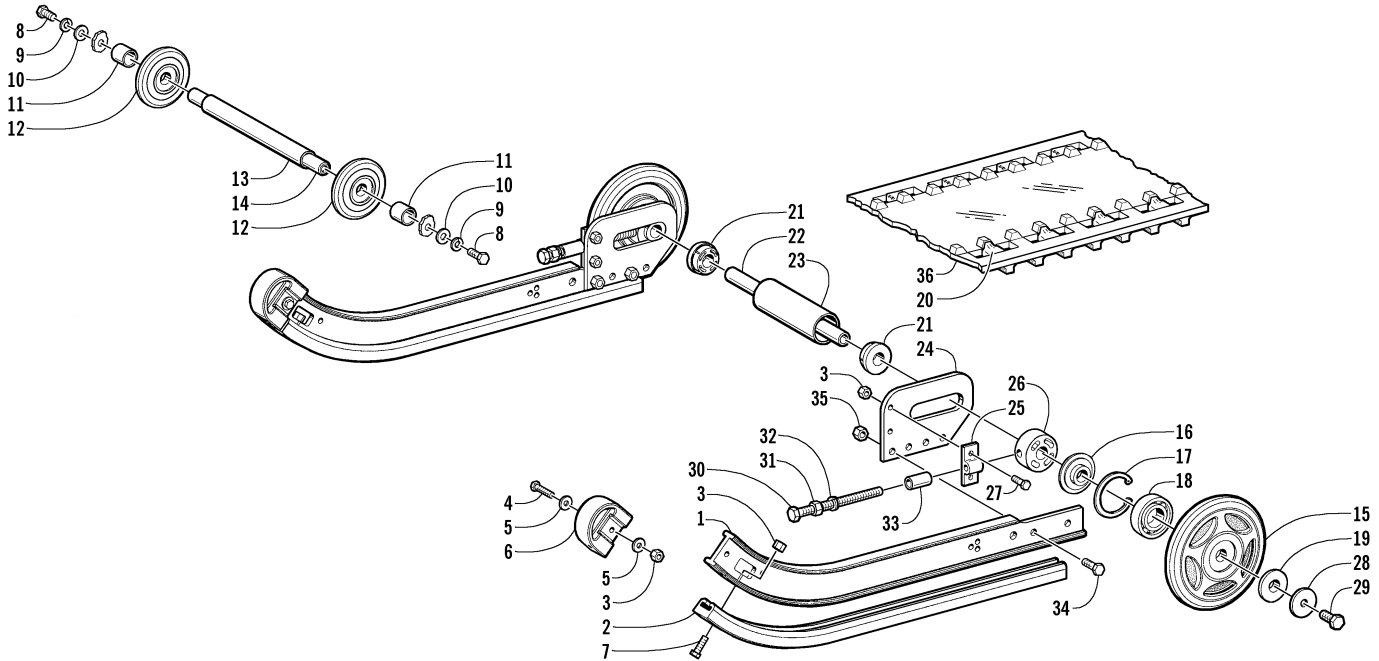


# SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY

(Complete Skid Frame Assembly p/n 7994-743)

0735-382


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1604-561	2	Rail, Formed	19	0104-341	2	● Insert, Idler Wheel - Outer
2	1604-568	2	Wearstrip, Slide Rail - Black	20	1602-079	32	Clip, Guide
3	8040-366	8	Nut, Lock	21	0604-968	2	Bushing, Spacer - Rear Idler Wheel
4	8002-044	2	Screw, Cap	22	1604-562	1	Axle, Idler Wheel - Rear
5	8050-217	4	Washer	23	1604-563	1	Spacer, Idler Wheel - Rear
6	0604-231	2	End Cap, Slide Rail	24	1604-153	2	Housing, Rear Axle
7	0123-869	2	Screw, Machine	25	0604-206	2	Adjuster, Track
8	8002-131	2	Screw, Cap	26	0604-165	2	Bushing, Rear Idler Wheel - Adjustment
9	8051-247	2	Washer, Lock	27	8002-041	4	Screw, Cap
10	8050-247	2	Washer	28	0123-570	2	Washer
11	1604-565	2	Spacer, Idler Wheel - Outer	29	8012-222	2	Screw, Cap
12	0300-180	2	Wheel, Idler	30	0623-123	2	Screw, Cap
13	1604-564	1	Spacer, Idler Wheel - Inner	31	8042-486	2	Nut
14	1604-555	1	Axle, Idler Wheel	32	8051-277	2	Washer, Lock
15	0604-981	2	Wheel, Idler - Rear (inc. 16-19)	33	0604-298	2	Spacer, Track Adjuster
16	0104-340	2	● Insert, Idler Wheel - Inner	34	8002-132	4	Screw, Cap
17	0123-798	2	● Ring, Retaining	35	8040-426	4	Nut, Lock
18	0107-598	2	● Bearing	36	1602-015	1	Track Assembly (inc. 20)

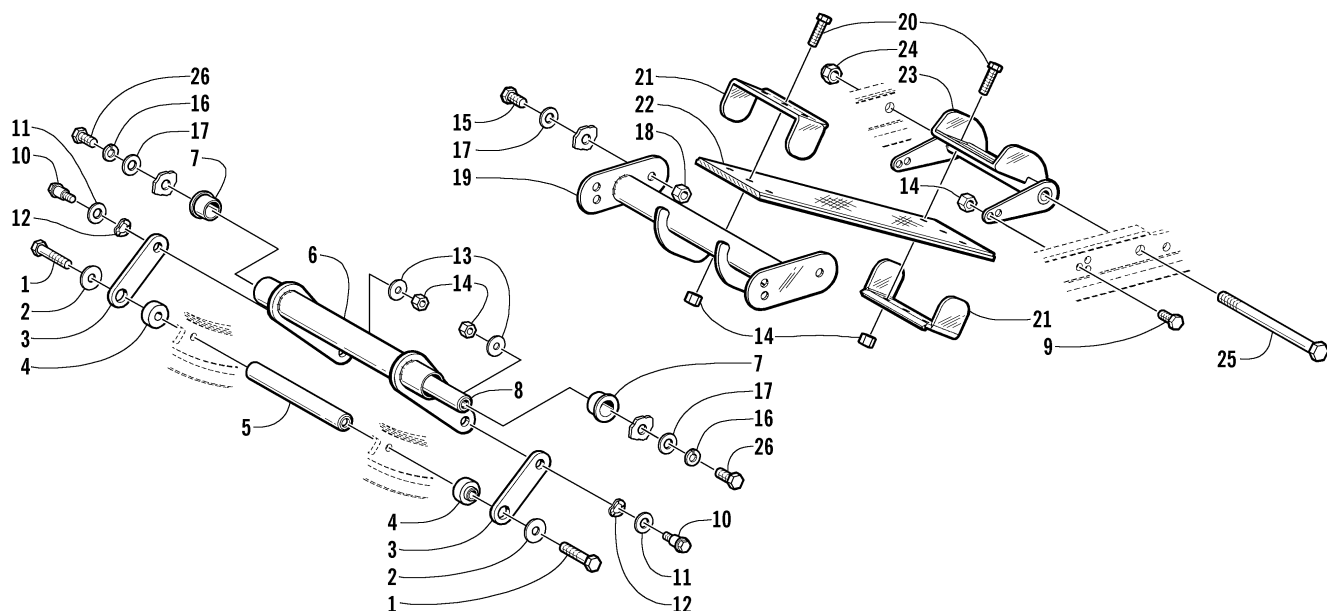

## REAR SUSPENSION ARM ASSEMBLIES

0735-384


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	8002-136	2	Screw, Cap	14	8040-366	10	Nut, Lock
2	8050-252	2	Washer	15	8002-130	4	Screw, Cap
3	1604-599	2	Arm, Front - Lower	16	8051-247	2	Washer, Lock
4	1604-603	2	Spacer, Front Arm - Lower	17	8050-247	6	Washer
5	1604-566	1	Axle, Cross-Brace	18	8040-426	4	Nut, Lock
6	0704-511	1	Arm, Front - Upper (inc. 7)	19	0704-487	1	Bracket, Mounting - Spring - Upper
7	0104-386	2	• Bushing, Front Arm	20	8002-042	6	Screw, Cap
8	1604-555	1	Axle, Idler - Upper	21	1604-610	2	Bracket, Spring Retainer
9	8002-040	2	Screw, Cap	22	1604-567	1	Spring, Rear Suspension
10	0623-855	2	Screw, Machine - Hex Shoulder	23	0704-486	1	Bracket, Mounting - Spring - Lower
11	8050-272	2	Washer	24	8040-486	1	Nut, Lock
12	0623-854	2	Washer, Spring	25	8002-240	1	Screw, Cap
13	8050-222	2	Washer	26	8002-131	2	Screw, Cap

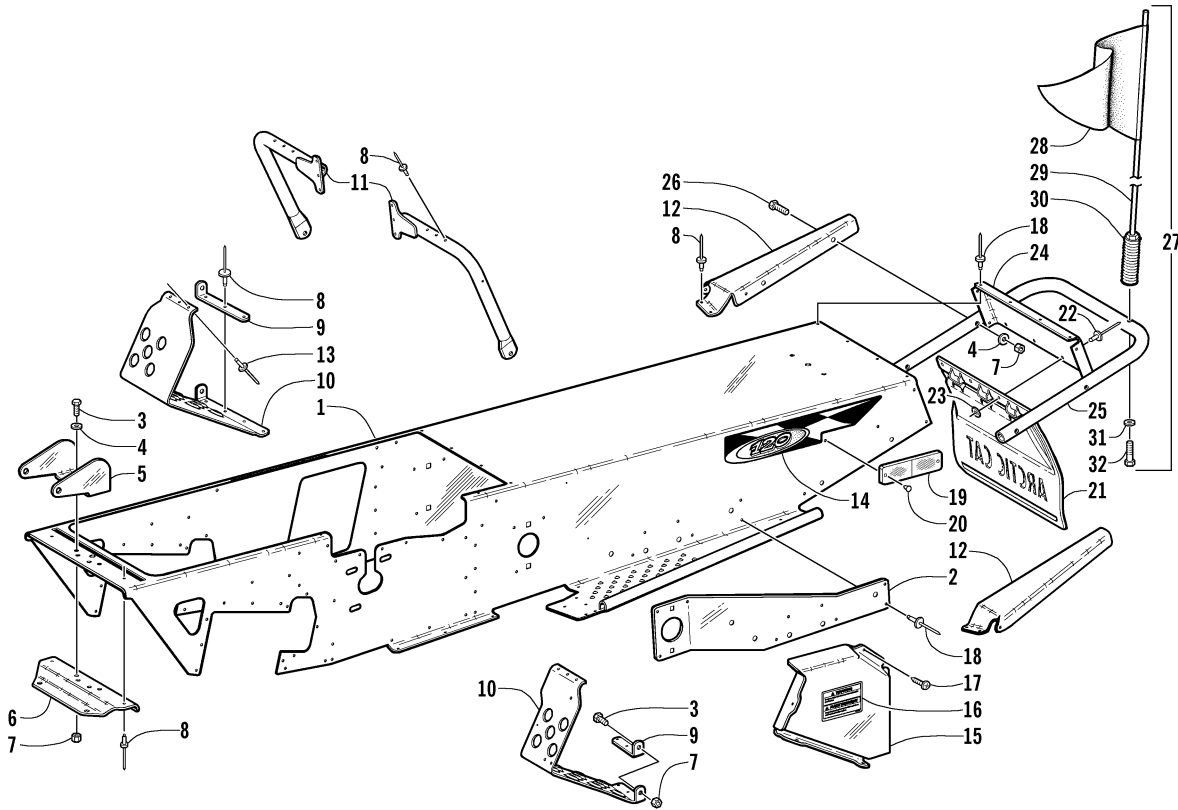

## CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY

0735-388

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0718-915</u>	1	Tunnel Assembly (inc. 2)	15	<u>1606-786</u>	1	Cover, Sprocket - Driven
2	<u>1606-761</u>	2	• Plate, Reinforcement - Tunnel	16	<u>3611-754</u>	1	Decal, Warning - Cover
3	8002-040	6	Screw, Cap	17	0623-378	4	Screw, Self-Tapping
4	8050-217	8	Washer	18	0123-418	28	Rivet
5	<u>2606-009</u>	1	Bracket, Mounting - Hood - Lower	19	0606-029	2	Reflector, Rear - Red
6	<u>2606-019</u>	1	Plate, Reinforcement	20	0623-269	4	Clip, Retaining
7	8040-366	10	Nut, Lock	21	<u>1606-750</u>	1	Snowflap
8	8060-484	29	Rivet	22	8060-628	4	Rivet
9	<u>1606-826</u>	1	Bracket, Support - Footrest - Right	23	0123-802	4	Washer
	<u>1606-827</u>	1	Bracket, Support - Footrest - Left	24	<u>1606-740</u>	1	Plate, Cover - Tunnel
10	<u>1606-784</u>	1	Footrest - Right	25	<u>1706-018</u>	1	Bumper, Rear
	<u>1606-785</u>	1	Footrest - Left	26	8002-044	4	Screw, Cap
11	<u>1706-040</u>	1	Support, Footrest - Right	27	<u>1706-105</u>	1	Flag, Safety - Assembly (inc. 28-32)
	<u>1706-041</u>	1	Support, Footrest - Left	28	<u>1706-104</u>	1	• Flag, Safety
12	<u>1606-816</u>	1	End Cap, Rear Bumper - Right	29	<u>1606-954</u>	1	• Pole, Safety Flag
	<u>1606-817</u>	1	End Cap, Rear Bumper - Left	30	<u>2606-010</u>	1	• Mounting, Safety Flag - Assembly
13	8060-486	6	Rivet	31	8050-247	1	• Washer
14	<u>3611-672</u>	1	Decal, Tunnel - Right	32	8002-134	1	• Screw, Cap
	<u>3611-673</u>	1	Decal, Tunnel - Left				

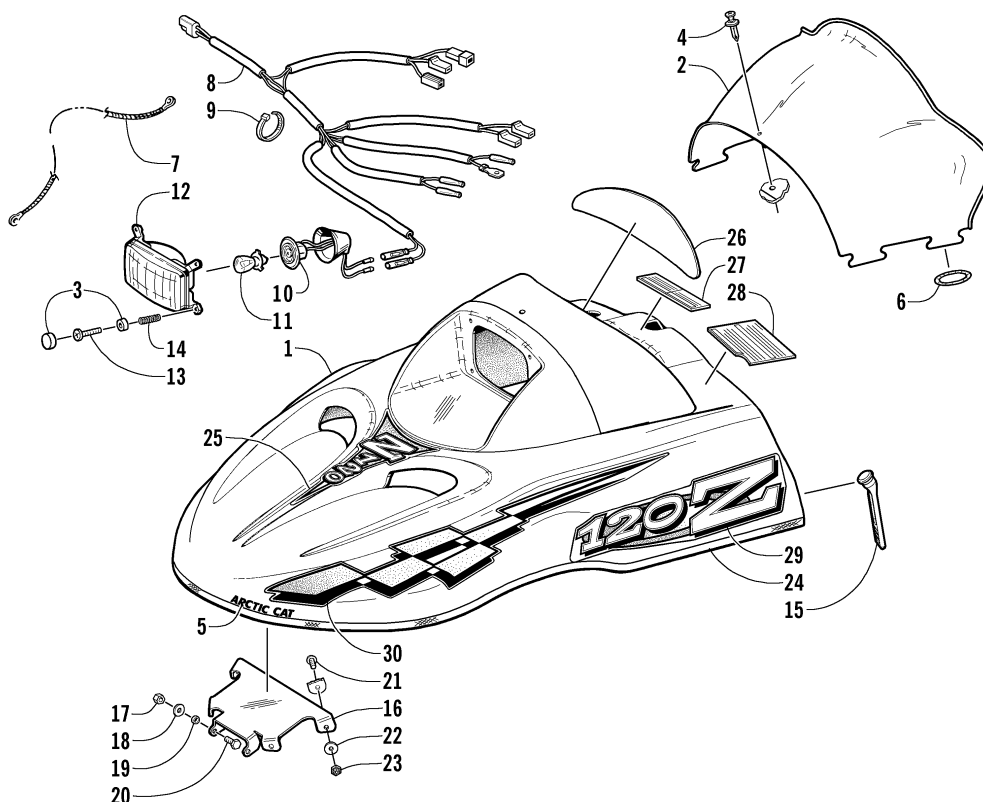


## HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY

0735-405

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>0718-913</u>	1	Hood w/o Decals	17	8040-366	2	Nut, Lock
	<u>0718-914</u>	1	Hood w/Decals	18	8050-217	2	Washer
2	<u>1606-747</u>	1	Windshield	19	0107-234	2	Spacer
3	<u>0124-054</u>	4	Snap Cap w/Washer	20	8002-040	2	Screw, Cap
4	<u>0623-243</u>	1	Clip, Retaining	21	<u>0623-420</u>	4	Screw, Hex Washer Head
5	<u>3611-187</u>	1	Decal, "Arctic Cat" - Hood	22	<u>0623-594</u>	4	Washer
6	<u>0616-032</u>	4	O-Ring, Windshield	23	<u>0623-392</u>	4	Nut, Lock
7	<u>1606-766</u>	1	Cable, Hood	24	<u>2611-121</u>	AR	Tape, Reflective
8	<u>0686-641</u>	1	Harness, Wiring - Main	25	<u>3611-674</u>	1	Decal, Hood - Center
9	<u>0123-788</u>	AR	Cable Tie - 7 in.	26	<u>3611-675</u>	1	Decal, Instrument Panel
10	<u>0609-006</u>	1	Socket w/Rubber Cap	27	<u>3611-755</u>	1	Decal, Caution - Throttle
11	<u>0609-004</u>	1	Bulb, Headlight	28	<u>3611-678</u>	1	Decal, Caution - Hood
12	<u>0609-005</u>	1	Lens/Reflector, Headlight	29	<u>3611-670</u>	1	Decal, "120 Z" - Hood - Right
13	<u>0123-616</u>	4	Screw, Adjustment		<u>3611-671</u>	1	Decal, "120 Z" - Hood - Left
14	<u>0123-614</u>	4	Spring, Adjustment Screw	30	<u>3611-668</u>	1	Decal, Hood - Right Front
15	<u>1606-930</u>	2	Strap, Hold-Down		<u>3611-669</u>	1	Decal, Hood - Left Front
16	<u>2606-008</u>	1	Bracket, Mounting - Hood - Upper				




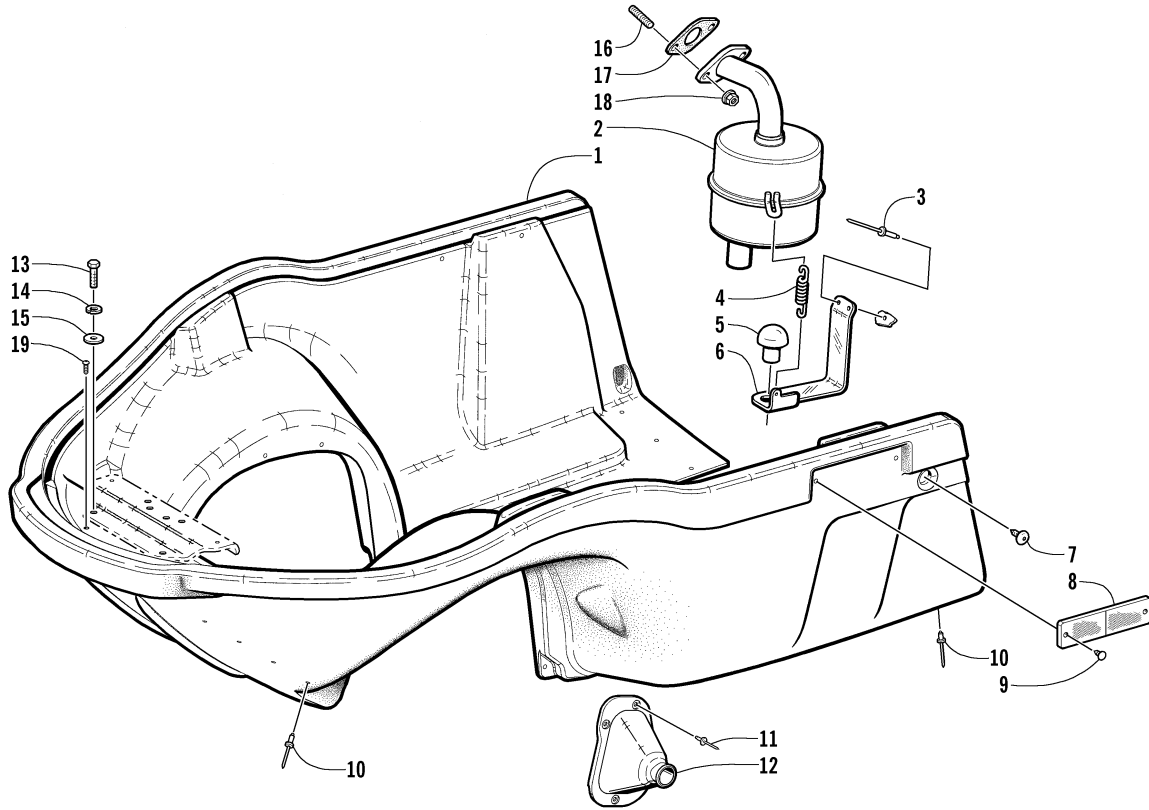

## BELLY PAN AND EXHAUST ASSEMBLIES

0735-407

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1606-748	1	Belly Pan	11	8060-508	8	Rivet
2	1612-155	1	Muffler	12	0605-464	1	Boot, Tie Rod - Right
3	8060-484	2	Rivet		0605-465	1	Boot, Tie Rod - Left
4	0123-321	1	Spring, Extension	13	8002-041	2	Screw, Cap
5	0612-111	1	Bumper, Molded - Rubber	14	8051-217	2	Washer, Lock
6	1612-146	1	Bracket, Muffler Support	15	8050-222	2	Washer
7	0623-784	2	Screw, Self-Tapping	16	0693-317	2	Bolt, Stud
8	0606-526	2	Reflector, Front - Yellow	17	0691-852	1	Gasket, Exhaust
9	0623-269	4	Clip, Retaining	18	3004-326	2	Nut
10	8061-508	22	Rivet	19	0623-453	2	Clip, Retaining

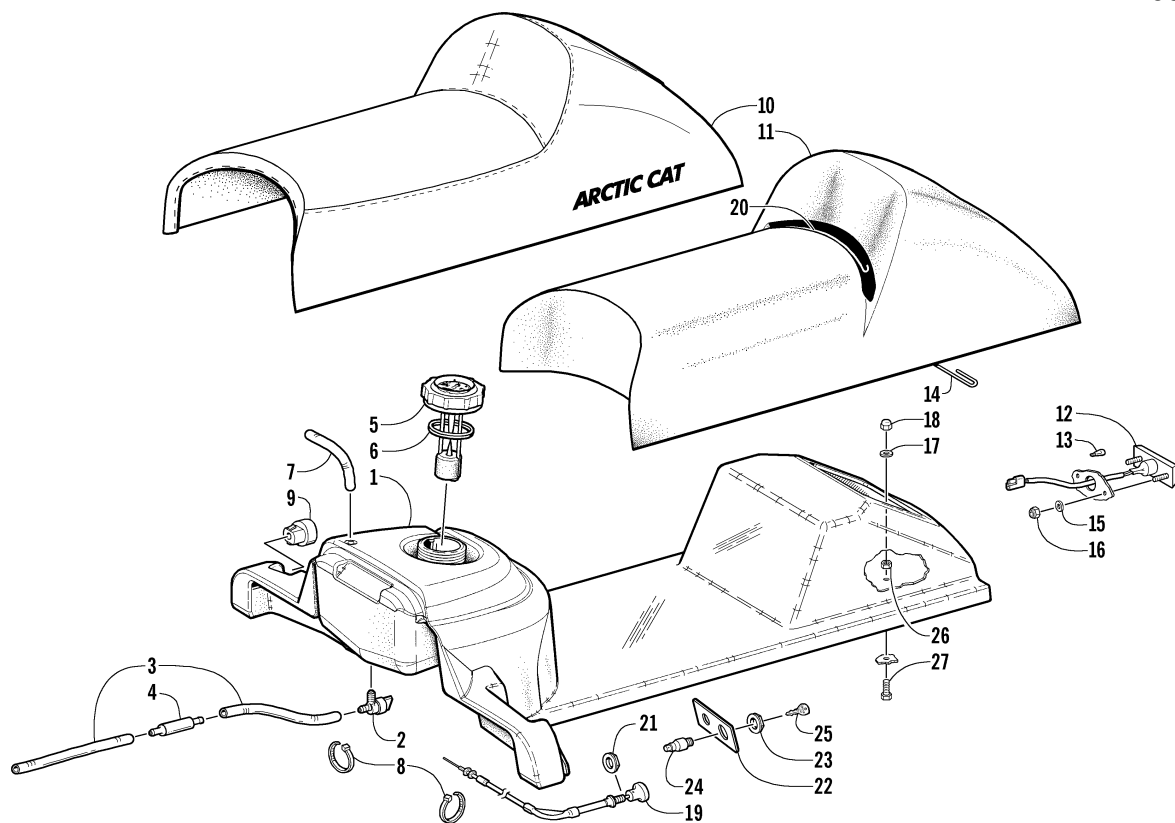


## GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY

(Complete Seat Assembly p/n 0718-912)

0735-390


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1606-749	1	Tank, Gas/Seat-Base (inc. 2-5)	14	0606-057	1	Wire, Seat
2	0676-017	1	• Valve, Shut-Off	15	8050-157	2	Washer
3	0610-017	AR	• Hose, Gasline - 100 ft	16	0123-709	2	Nut w/Lock Washer
	0610-008	AR	• Hose, Gasline - 25 ft	17	0623-184	2	Washer
4	0510-335	1	• Filter, Fuel	18	0123-108	2	Nut, Nylon Cap
5	1670-084	1	Cap, Gas Tank (inc. 6)	19	0687-124	1	Cable, Choke
6	0109-733	1	• Seal, Gas Cap	20	2606-031	1	Wire, Seat
7	0610-015	AR	Hose, Vent - 100 ft	21	0623-054	1	Nut, Choke Cable
	0610-016	AR	Hose, Vent - 25 ft	22	3611-676	1	Decal, Switch/Choke
8	0123-811	2	Cable Tie - 4 in.	23	0609-111	1	Nut, Retaining
9	0116-469	1	Bushing, Recoil Starter	24	0109-822	1	Switch, Ignition
10	1706-143	1	Cover, Seat	25	0116-065	1	Key, Ignition
11	1706-017	1	Foam, Seat	26	8041-366	2	Nut, Lock
12	0609-070	1	Taillight Assembly (inc. 13)	27	8002-040	2	Screw, Cap
13	0230-020	1	• Bulb, Taillight				

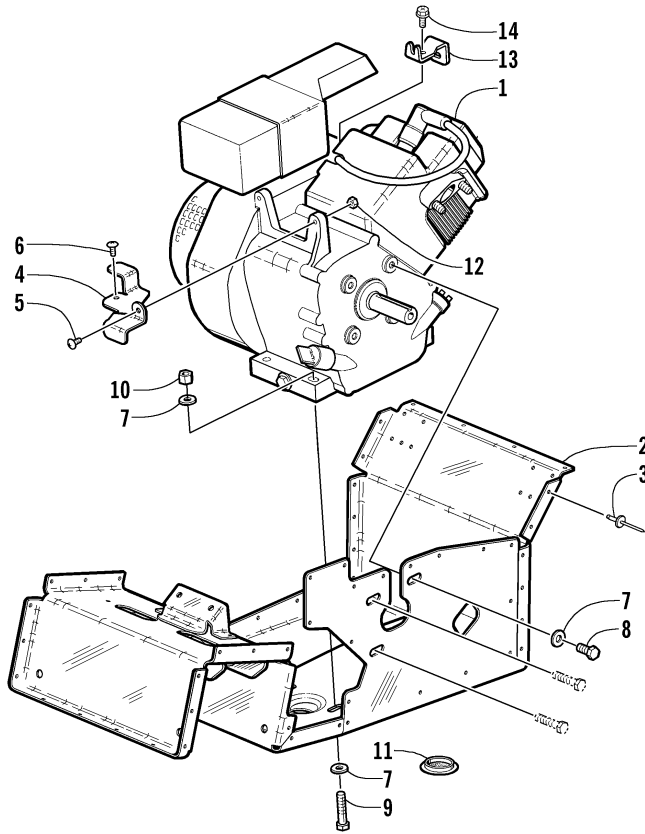

## ENGINE AND RELATED PARTS

0735-411


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0662-251	1	Engine, AA12A1	8	8004-130	1	Screw, Cap
2	1706-014	1	Front End	9	8002-135	4	Screw, Cap
3	8060-484	56	Rivet	10	8040-426	4	Nut, Lock
4	1606-821	1	Cover, Governor	11	0623-822	5	Plug
5	8007-400	1	Screw, Machine	12	8041-246	1	Nut, Lock
6	0623-786	1	Screw, Self-Tapping	13	1670-074	1	Bracket, Throttle Cable
7	8050-247	9	Washer	14	3004-987	1	Screw, Cap

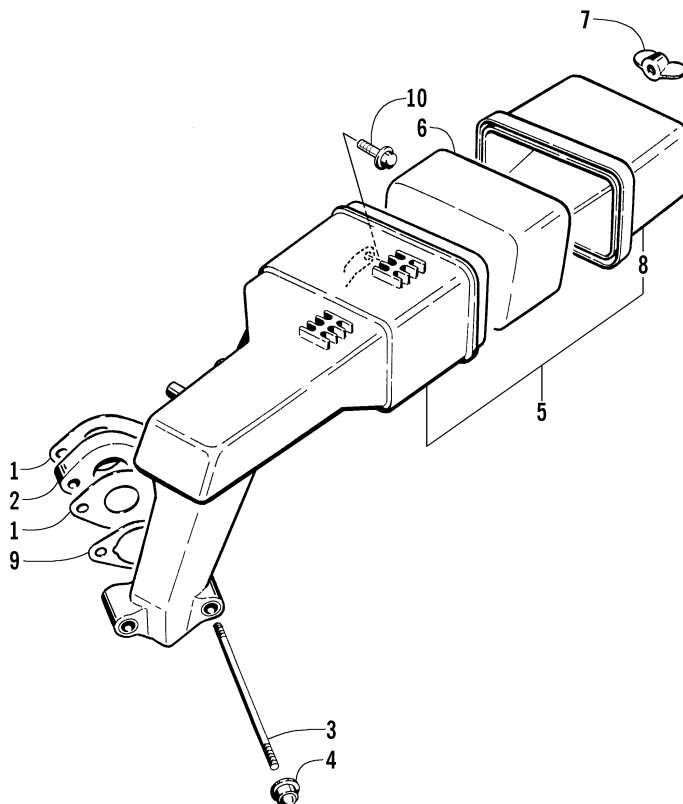

## AIR CLEANER ASSEMBLY

0732-147


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0693-282	2	Gasket, Carburetor	6	0691-736	1	• Filter, Air Cleaner
2	0691-850	1	Insulator, Carburetor	7	0693-542	1	• Nut, Wing
3	0693-364	2	Bolt, Stud	8	0691-851	1	• Cover, Air Cleaner
4	3004-488	2	Nut	9	0693-287	1	Gasket, Air Cleaner
5	0693-543	1	Cleaner, Air - Assembly (inc. 6-8)	10	0693-307	1	Bolt

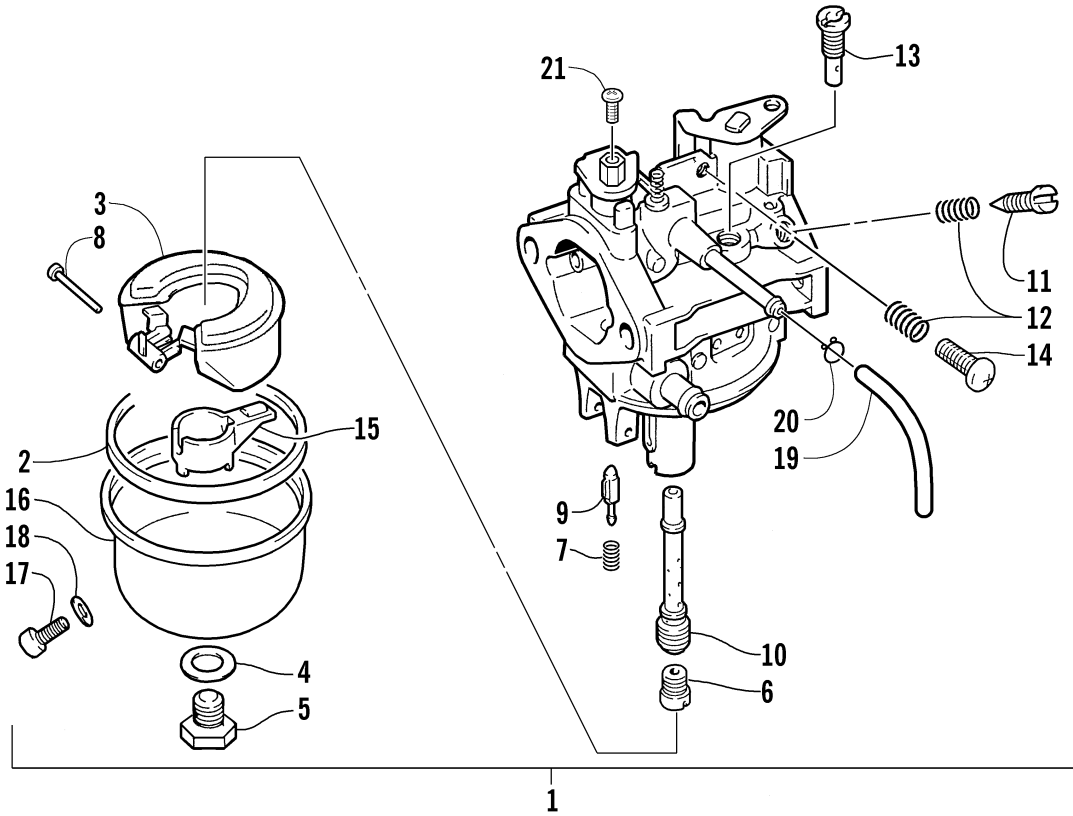

## CARBURETOR

0735-414


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-010	1	Carburetor Assembly (inc. 2-21)	12	0691-272	2	• Spring
2	0691-423	1	• Gasket, Float Chamber	13	0693-538	1	• Pilot Jet (37.5)
3	0691-424	1	• Float	14	0693-315	1	• Screw
4	0691-422	1	• Gasket, Drain Plug	15	0691-426	1	• Ring
5	0691-421	1	• Plug, Drain	16	0693-283	1	• Chamber, Float
6	3003-189	1	• Main Jet (37.5)	17	0693-284	1	• Screw, Drain
7	0691-428	1	• Spring, Needle Jet	18	0693-285	1	• Gasket, Drain Screw
8	0693-536	1	• Pin, Float	19	0694-012	1	• Hose, Gasline
9	0693-055	1	• Needle Jet	20	0694-011	1	• Clamp, Hose
10	0693-056	1	• Nozzle	21	0694-025	1	• Screw
11	0691-102	1	• Adjuster				

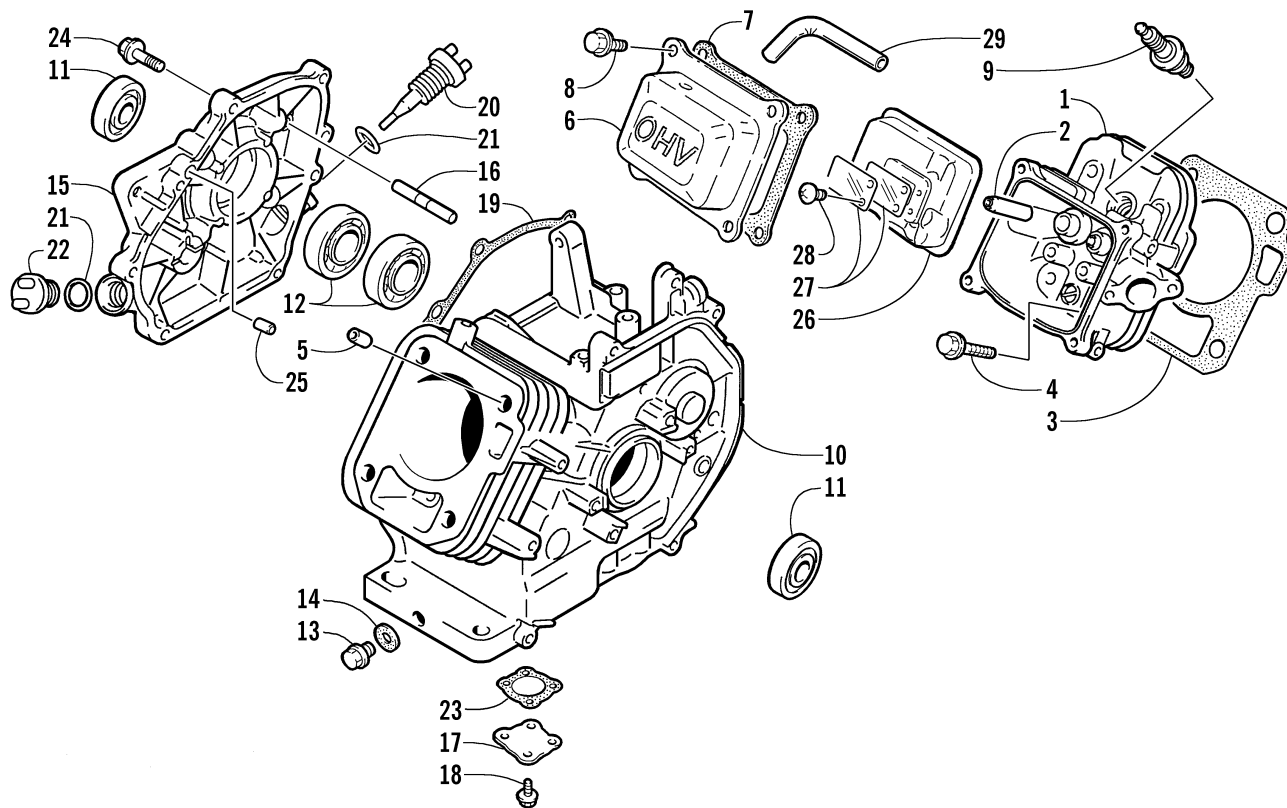

## CYLINDER AND CRANKCASE

0735-417


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0691-384	1	Head, Cylinder (inc. 2)	17	0694-022	1	Cover, Oil Level Sensor
2	0691-545	2	• Guide, Valve	18	0693-307	4	Bolt
3	0691-386	1	Gasket, Cylinder Head	19	0691-834	1	Gasket, Crankcase
4	0693-303	4	Bolt	20	0694-003	1	Gauge, Engine Oil Level - Assembly (inc. 21)
5	3008-199	2	Pin, Dowel	21	0693-298	2	• O-Ring
6	0691-830	1	Cover, Cylinder Head	22	0694-004	1	Plug, Engine Oil Drain - Assembly (inc. 21)
7	0691-387	1	Gasket, Cylinder Head Cover	23	0691-837	1	Gasket, Engine Oil Level Sensor
8	0693-241	4	Bolt	24	0693-243	7	Bolt
9	0217-703	1	Plug, Spark (BPR6ES)	25	3005-206	2	Pin, Dowel
10	0694-001	1	Cylinder Assembly (inc. 11-14)	26	0691-393	1	Body, Air Breather - Assembly (inc. 27-28)
11	0691-376	2	• Seal, Oil	27	0693-226	1	• Valve, Reed - Set
12	0691-374	2	• Bearing	28	0693-305	2	• Screw
13	0693-253	2	• Plug	29	0693-362	1	Hose, Air Breather
14	3002-276	2	• Gasket				
15	0694-002	1	Cover, Crankcase - Assembly - Side (inc. 12, 13, and 16)				
16	0691-844	1	• Shaft, Governor Gear				

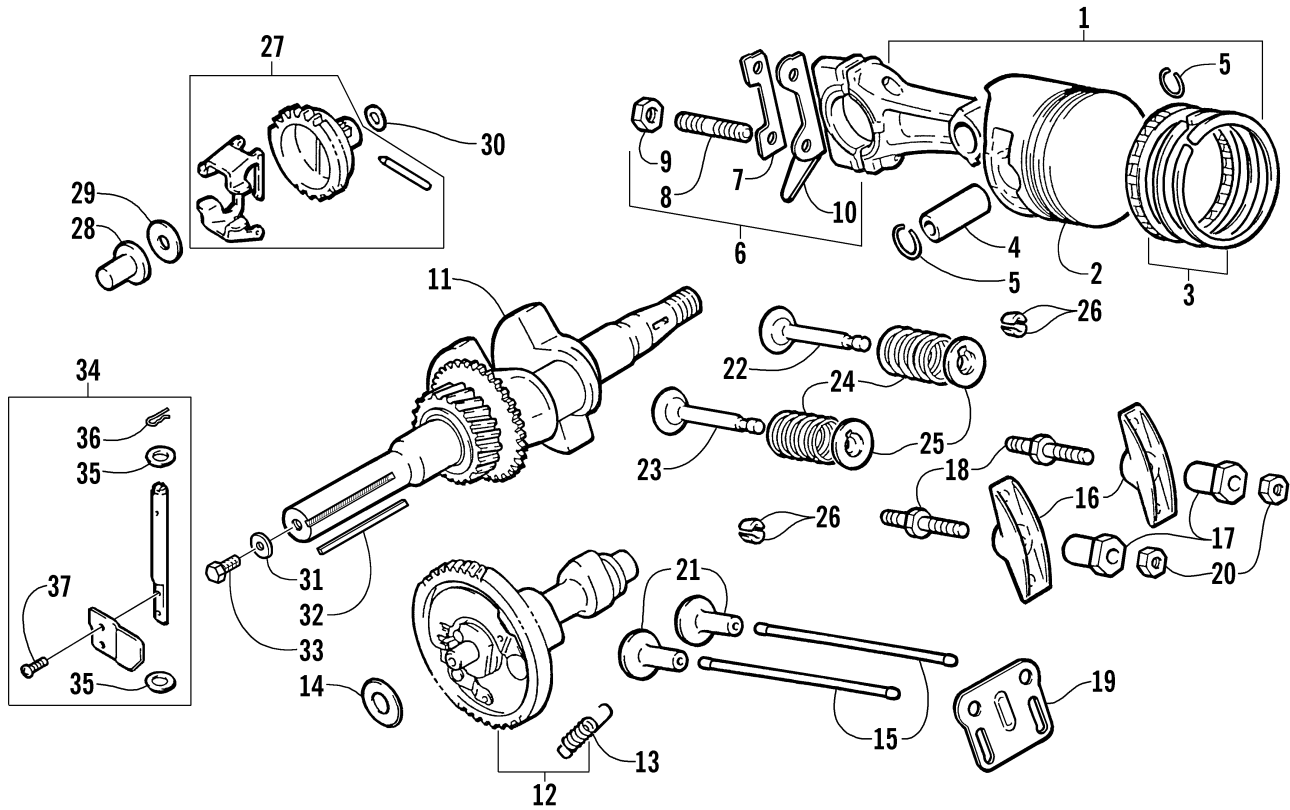

## PISTON AND CRANKSHAFT

0735-429

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-026	1	Piston Assembly (inc. 2, 3, and 5)	18	0691-414	2	Bolt, Stud - Pivot
2	0691-398	1	• Piston	19	0691-415	1	Guide, Push Rod
	0691-569	1	• Piston, Oversized (0.25 mm)	20	0691-016	2	Nut
	0691-570	1	• Piston, Oversized (0.50 mm)	21	0691-406	2	Tappet
3	0691-399	1	• Ring, Piston - Set	22	0694-008	1	Valve, Intake
	0691-571	1	• Ring, Piston - Set - Oversized (0.25 mm)	23	0694-009	1	Valve, Exhaust
	0691-572	1	• Ring, Piston - Set - Oversized (0.50 mm)	24	0691-410	2	Spring, Valve
4	0691-400	1	Pin, Piston	25	0693-313	2	Retainer, Valve Spring
5	0691-378	2	Circlip	26	0693-281	4	Cotter, Valve
6	0691-936	1	Rod, Connecting - Assembly (inc. 7-10)	27	0693-698	1	Gear, Governor - Set
7	0691-403	1	• Plate, Lock	28	0691-842	1	Slider, Governor
8	0691-366	2	• Bolt, Stud	29	0691-843	1	Washer
9	3004-851	2	• Nut	30	3004-652	1	Washer
10	0691-402	1	• Plate, Splash	31	0694-024	1	Washer
11	0694-005	1	Crankshaft Assembly	32	0694-006	1	Key, Crankshaft
12	0691-922	1	Camshaft (inc. 13)	33	0694-007	1	Bolt, Crankshaft
13	0691-380	1	• Spring	34	0693-258	1	Shaft, Throttle Control - Set (inc. 35-37)
14	0691-840	1	Washer	35	0693-252	2	• Washer
15	0691-407	2	Rod, Push	36	0691-848	1	• Pin, Snap
16	0691-412	2	Arm, Rocker	37	3004-563	2	• Screw
17	0691-413	2	Pivot				

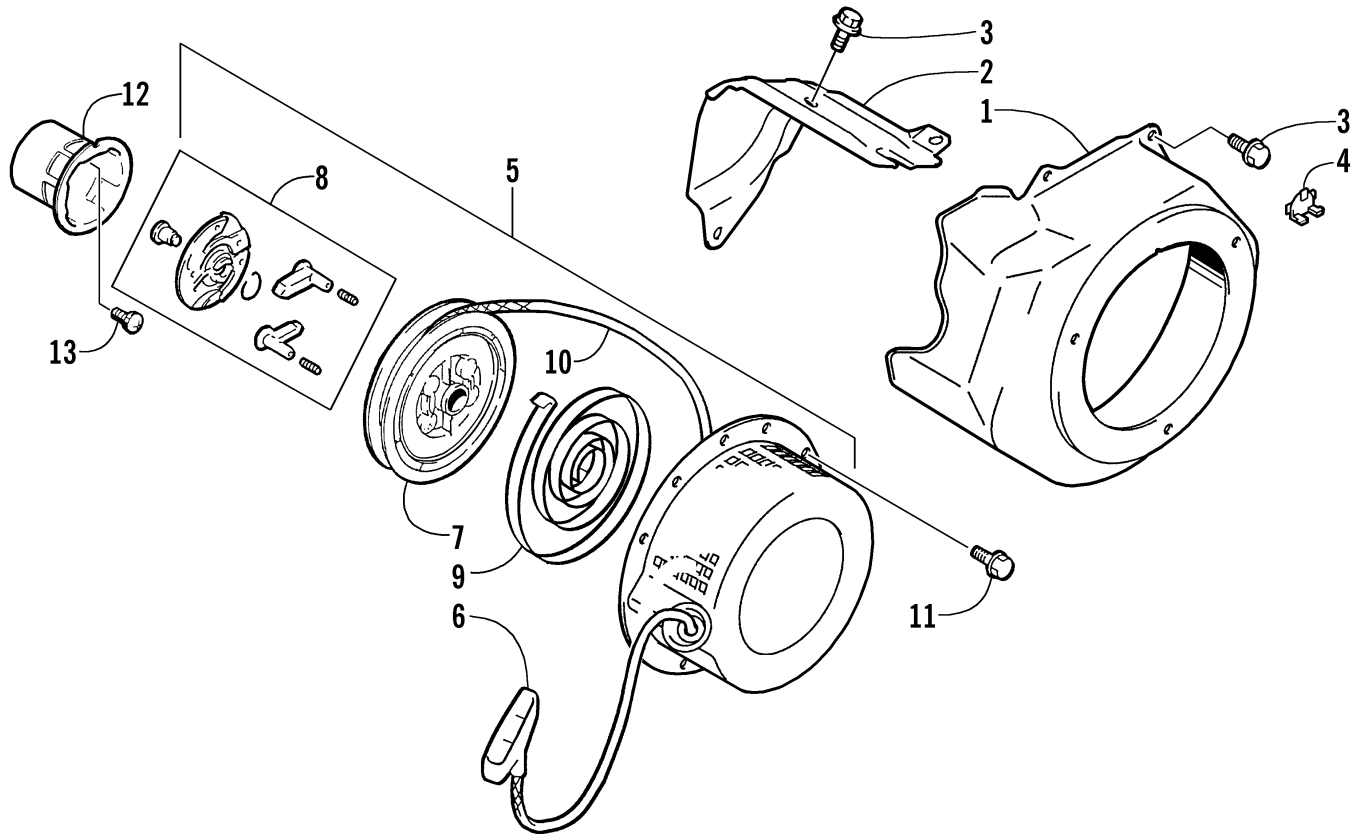


## RECOIL STARTER

0735-430

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-013	1	Cover, Ventilation Cowling	8	0693-256	1	• Ratchet Set
2	0691-853	1	Cowling, Ventilation	9	0691-298	1	• Spring, Spiral
3	0693-241	7	Bolt	10	3003-327	1	Rope
4	0691-122	1	Protector, Lead Wire	11	0693-246	3	Bolt
5	0694-014	1	Starter, Recoil - Assembly (inc. 6-9)	12	0691-863	1	Pulley, Starter
6	0693-257	1	• Grip Assembly	13	3004-423	3	Screw
7	0691-856	1	• Reel				




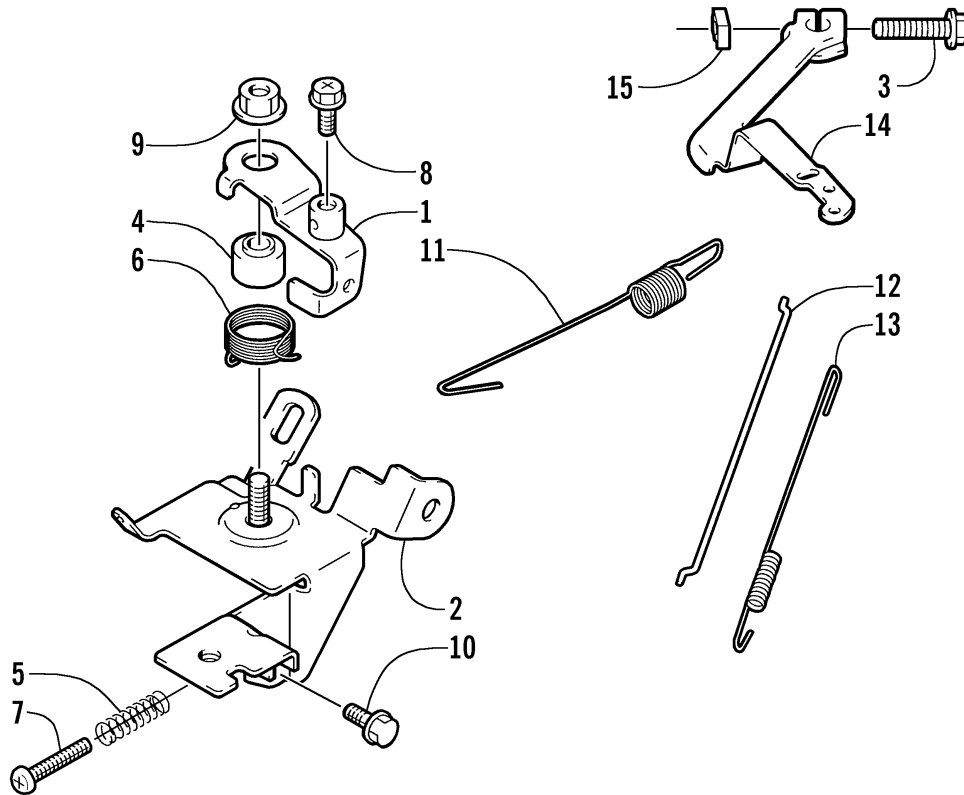

## THROTTLE CONTROL ASSEMBLY

0735-433

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-016	1	Lever, Throttle Cable	9	3004-351	1	Nut
2	0694-017	1	Bracket, Throttle Control	10	0693-241	1	Bolt
3	0693-416	1	Bolt	11	0694-015	1	Spring, Throttle Control
4	3002-459	1	Spacer	12	0694-019	1	Rod, Carburetor
5	0691-901	1	Spring	13	0691-455	1	Spring, Carburetor Rod
6	3003-922	1	Spring	14	0693-259	1	Lever, Throttle Control (inc. 3 and 15)
7	3004-611	1	Screw	15	0691-017	1	• Nut
8	3004-987	1	Bolt				

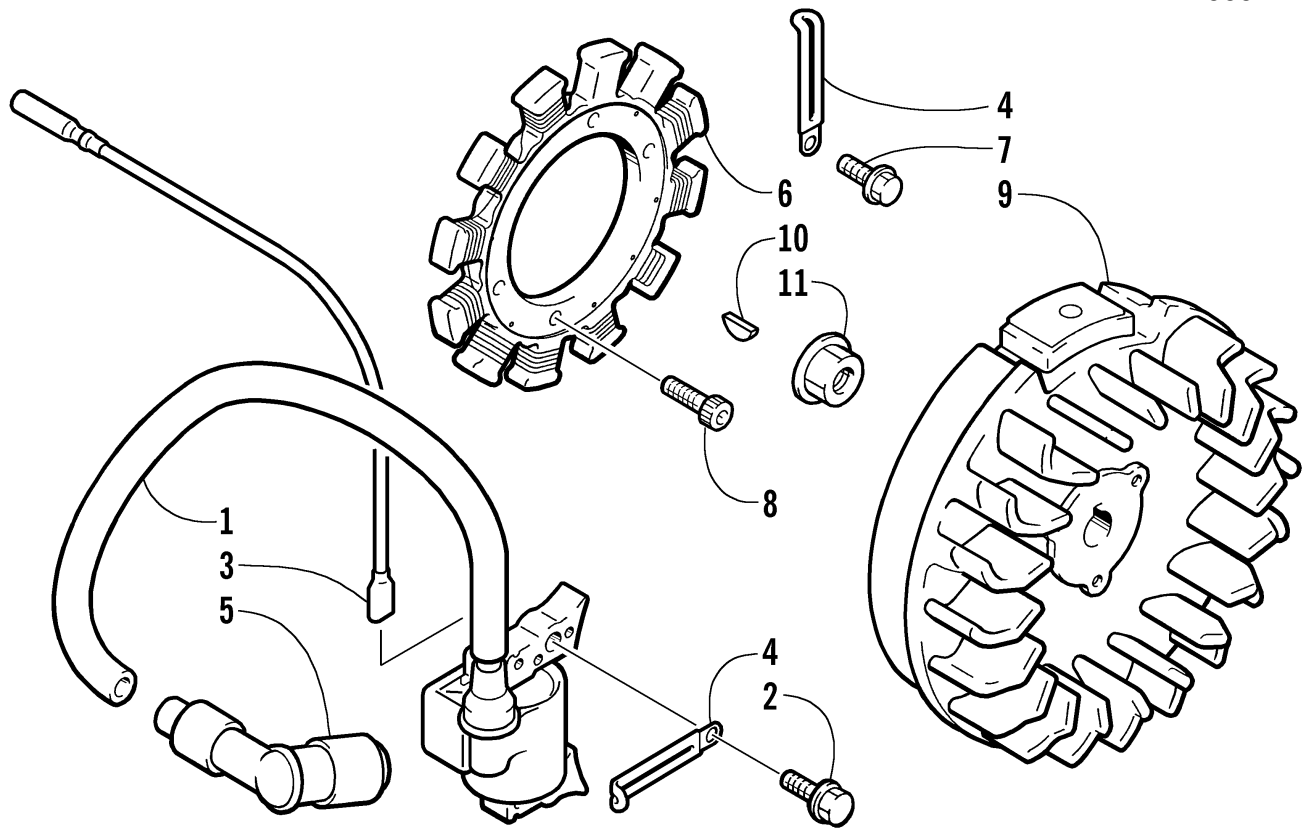

# MAGNETO

0735-431

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0693-326	1	Coil, Ignition - Assembly	7	0693-241	1	Bolt
2	0693-242	2	Bolt	8	0694-023	4	Bolt
3	0693-263	1	Wire, Magneto Lead	9	0694-020	1	Rotor/Flywheel
4	3002-964	2	Clamp, Wire	10	3004-540	1	Key
5	0691-322	1	Cap, Spark Plug	11	0691-370	1	Nut
6	0694-021	1	Stator				

# Related Items

## 2000 Z 120

(Model No. S2000ZAAAAUS)

1639-440	Cover, Machine (Deluxe Coverall)	1639-764	Headlight Cover - Smoke
1639-586	Traction Kit, Wearbars & Studs	1639-761	Running Board Grip Plates - Green
1639-589	Wearbars, Competition 4 & 6 in. (Set)	1639-754	Snowflap, Custom
1639-587	Studs, 0.770 Steel w/T-Nut & Round Washer (24/pk)	1604-611	Wearstrip - Green
1639-588	Studs, 0.770 Steel Studs Only (24/pk)	1639-526	Windscreen - Black
1639-762	Handlebar Grips - Green	1639-768	Windshield - Tall
1639-763	Headlight Cover - Green	2256-238	Manual, Operator's
		2256-262	Manual, Illustrated Parts

■ NOTE: For a complete list of related items, refer to the current accessory catalog.

