

# ARCTIC CAT®

*SHARE OUR PASSION.™*

## Illustrated Parts Manual



### AC 120

Model Number S2007ACAAAUSG

Model Number S2007ACAAAUSO

2007

# TABLE OF CONTENTS

## 2007 AC 120

(Model No. S2007ACAAAUSG)

(Model No. S2007ACAAAUSO)


SKI AND SPINDLE ASSEMBLY .....	1
A-ARM ASSEMBLY .....	2
FRONT SUSPENSION SHOCK ABSORBER .....	3
STEERING POST AND TIE ROD ASSEMBLY .....	4
DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES .....	5
SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY .....	6
REAR SUSPENSION ARM ASSEMBLY .....	7
CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY .....	8
HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY .....	9
BELLY PAN AND EXHAUST ASSEMBLIES .....	10
GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY .....	11
ENGINE AND RELATED PARTS .....	12
AIR CLEANER ASSEMBLY .....	13
CARBURETOR .....	14
CYLINDER AND CRANKCASE .....	15
PISTON AND CRANKSHAFT .....	16
RECOIL STARTER .....	17
THROTTLE CONTROL ASSEMBLY .....	18
MAGNETO .....	19
RELATED ITEMS.....	Back Cover

■ **NOTE:** The illustrations used in this Parts Manual are for reference to replacement part numbers only and are not to be used for assembly. For assembly procedures, use an Arctic Cat Service Manual. Underlined part numbers are new for the 2007 model year.

2006 Arctic Cat Inc.

Printed July 2006


®™ Trademarks of Arctic Cat Inc., Thief River Falls, MN 56701

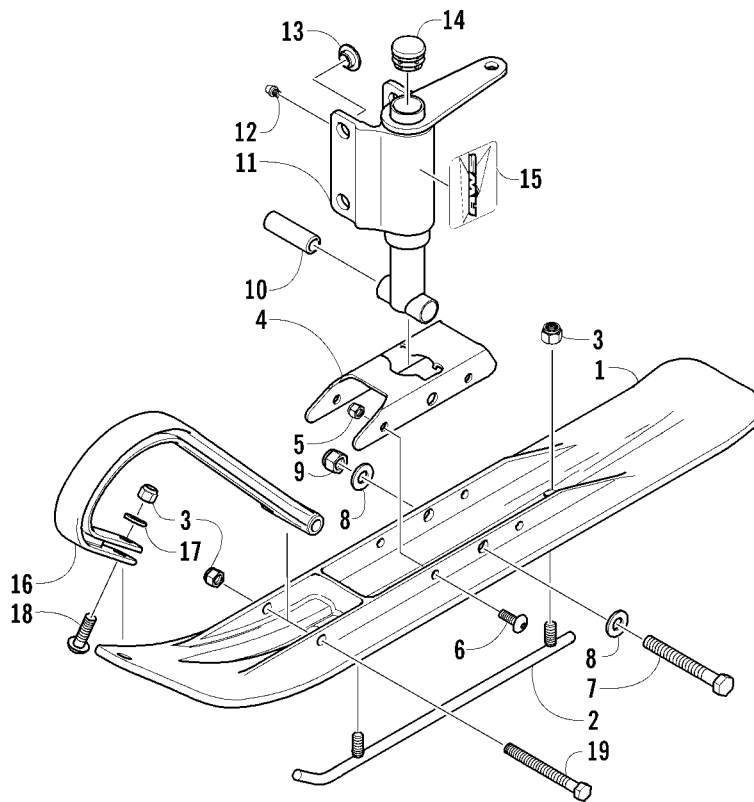

## SKI AND SPINDLE ASSEMBLY

0741-535


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1603-593	2	Ski, Plastic - Black	11	1703-864	2	Spindle (inc. 12-13)
2	0703-698	2	Wearbar	12	0623-010	2	● Fitting, Grease
3	8047-426	8	Nut, Lock	13	0603-647	8	● Insert, Spindle
4	1703-649	2	Saddle, Ski - Platinum	14	0623-831	2	Cap, Spindle
5	8047-366	8	Nut, Lock	15	7611-510	1	Decal, "AWS" - Spindle - Right
6	8017-580	8	Screw, Machine		7611-511	1	Decal, "AWS" - Spindle - Left
7	8002-231	2	Screw, Cap	16	1603-594	2	Handle, Ski - Black
8	8050-277	4	Washer	17	8050-247	2	Washer
9	8047-486	2	Nut, Lock	18	8017-672	2	Screw, Cap
10	1603-365	2	Axle, Suspension	19	8002-141	2	Screw, Cap

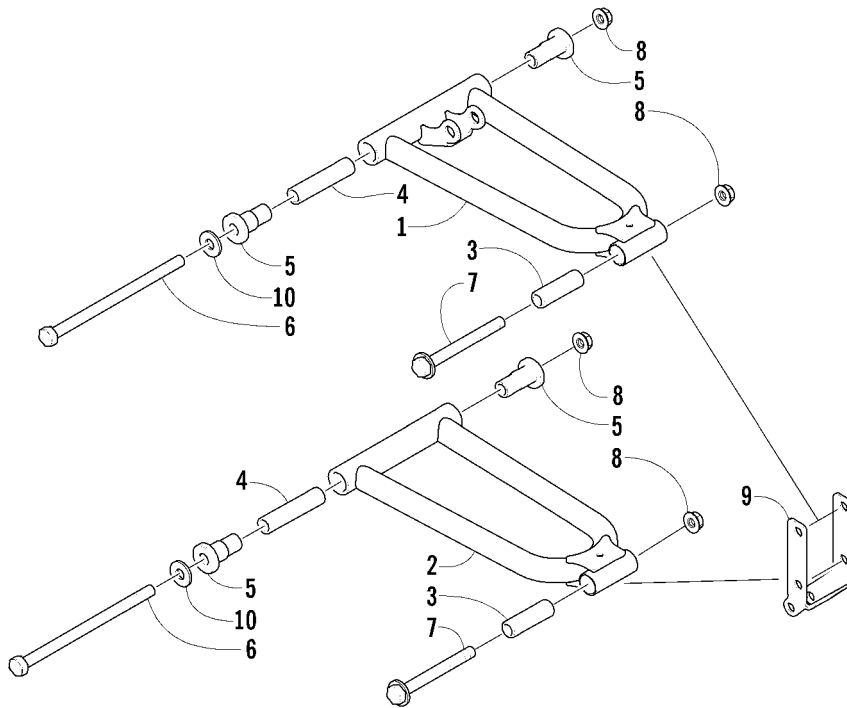

## A-ARM ASSEMBLY

0741-771


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1703-820	2	A-Arm - Upper - Platinum	6	0623-900	4	Screw, Cap
2	1703-821	2	A-Arm - Lower - Platinum	7	8020-232	4	Screw, Cap
3	1603-365	4	Axle, Suspension	8	8047-486	8	Nut, Lock
4	1603-394	4	Axle, Suspension	9	1703-644	2	Bracket, Mounting - Shock
5	0605-451	8	Axle, Powder Metal	10	8050-277	4	Washer

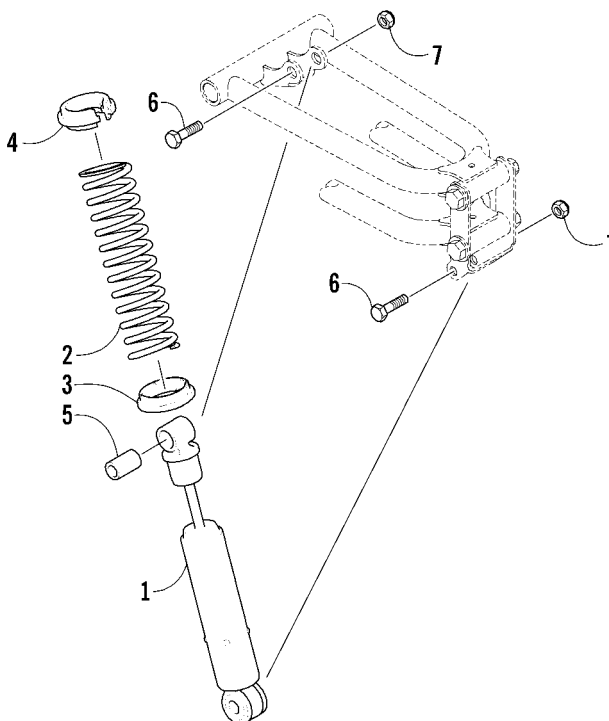

## FRONT SUSPENSION SHOCK ABSORBER

0740-317


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	2603-517	2	Shock, Ski	5	1603-531	2	Axle, Shock - Front Arm
2	<u>2703-028</u>	2	Spring, Shock - Yellow	6	8002-225	4	Screw, Cap
3	0403-027	2	Retainer, Spring - Lower	7	8041-486	4	Nut, Lock
4	2603-520	2	Retainer, Spring - Upper				

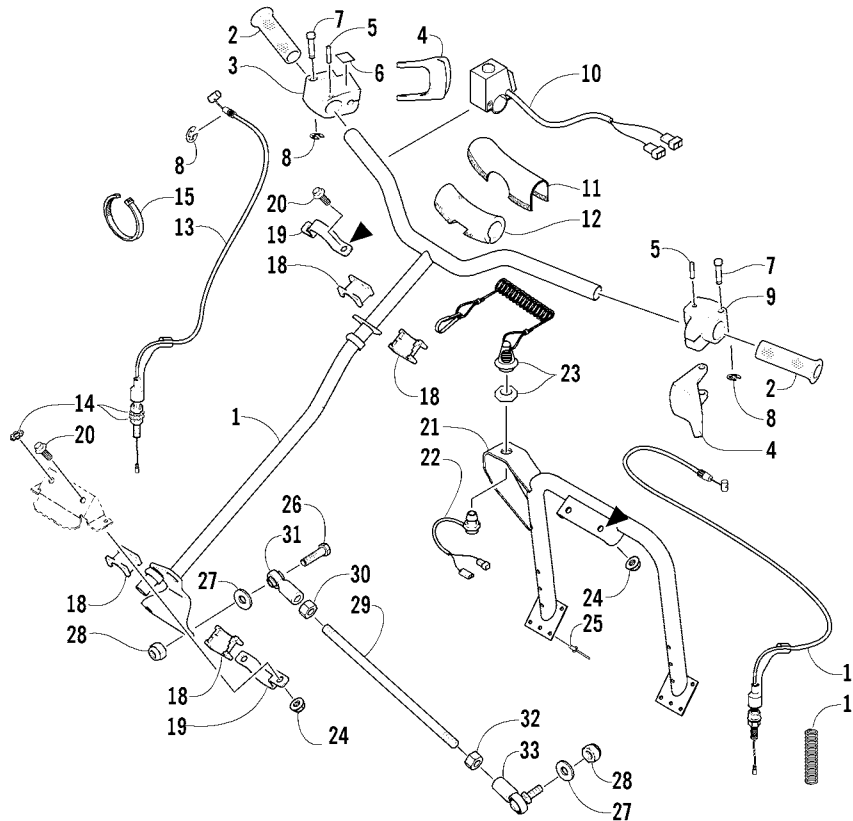

## STEERING POST AND TIE ROD ASSEMBLY

0740-319


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1703-866	1	Post, Steering - Black	18	0605-444	4	Bearing, Steering Post
2	1606-765	2	Grip, Handle	19	0705-896	2	Retainer, Bearing
3	0302-165	1	Control, Throttle	20	8020-040	4	Screw, Cap
4	0109-609	2	Lever, Throttle/Brake	21	2706-144	1	Support, Steering Post
5	8070-318	2	Pin, Spring	22	0630-138	1	Switch, Tether - Assembly (inc. 23)
6	0611-022	1	Decal, Engine Stop Switch	23	0630-139	1	● Cord, Tether Switch
7	0123-230	2	Pin	24	8047-366	4	Nut, Lock
8	0123-231	3	Ring, Retaining	25	8060-504	10	Rivet, Blind
9	0302-147	1	Housing, Brake	26	8004-135	2	Screw, Cap
10	0609-007	1	Switch, Engine Stop	27	8050-247	4	Washer
11	0605-887	1	Cover, Handlebar Pad	28	1623-423	4	Nut, Lock
12	0605-501	1	Pad, Handlebar	29	1703-853	2	Tie Rod - Assembly (inc. 30-33)
13	0687-200	1	Cable, Throttle	30	0623-260	2	● Nut, Hex - Left
14	8053-212	3	Washer, Lock - External Tooth	31	0605-777	2	● Rod End - Left
15	0123-788	AR	Cable Tie - 7 in.	32	0123-144	2	● Nut, Hex - Right
16	0687-122	1	Cable, Brake	33	0605-776	2	● Rod End - Right
17	1602-100	1	Spring, Return - Brake				

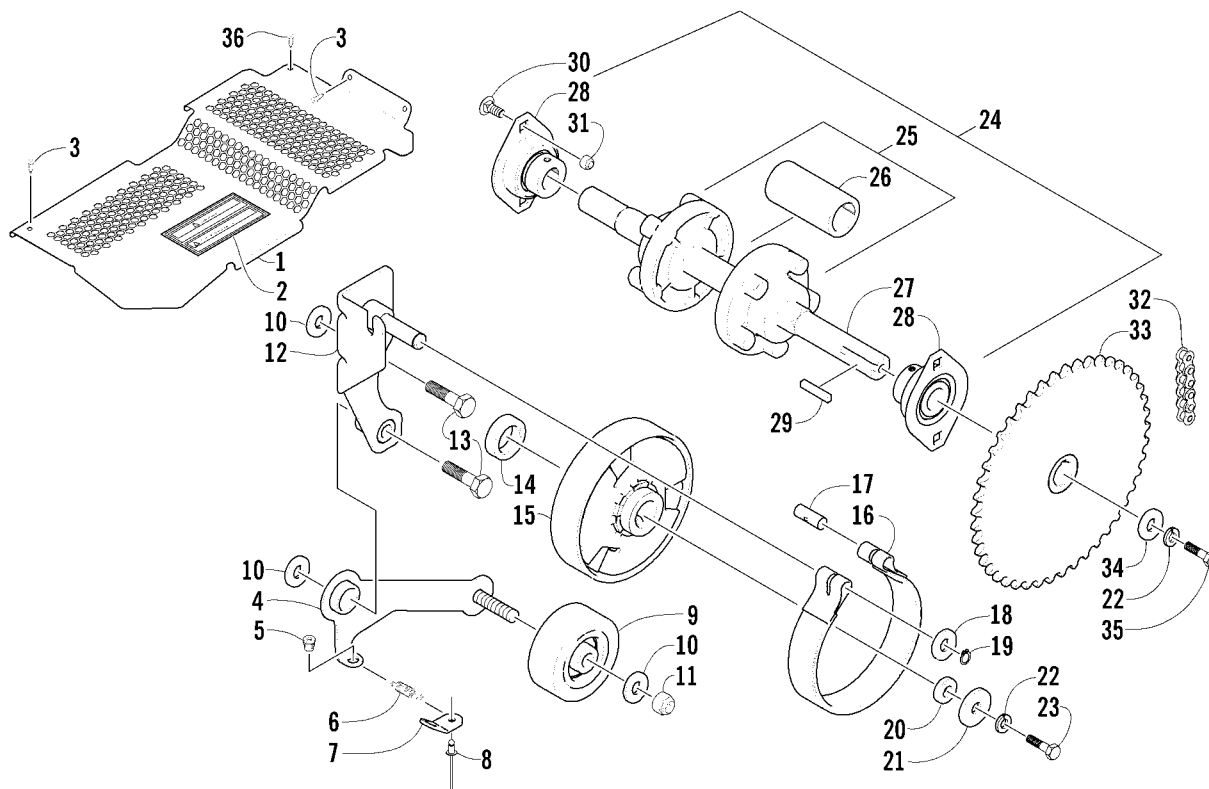

## DRIVE TRAIN SHAFT AND BRAKE ASSEMBLIES

0740-320

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0712-915	1	Shield, Clutch/Brake/Muffler	19	0623-821	1	Ring, Snap
2	3611-754	1	Decal, Warning - Guard	20	1602-027	1	Spacer, Clutch - Outer
3	0623-797	3	Screw, Self-Tapping	21	0123-260	1	Washer
4	0702-376	1	Tensioner, Chain	22	8051-242	2	Washer, Lock
5	0623-868	1	Bushing, Snap	23	8004-132	1	Screw, Cap
6	1612-178	1	Spring, Tensioner - Chain	24	<u>0728-167</u>	1	Track Drive Assembly (inc. 25-28)
7	2606-021	1	Tab, Spring Retainer	25	1602-117	2	● Sprocket, Track Drive
8	8060-484	1	Rivet	26	1602-148	1	● Spacer
9	1602-065	1	Roller, Chain Tensioner	27	1602-850	1	● Shaft, Track Drive Sprocket
10	8050-247	3	Washer	28	<u>1602-992</u>	2	● Bearing, Chain Sprocket
11	8041-426	1	Nut, Lock	29	0623-823	1	Key
12	0702-360	1	Bracket, Brake	30	8011-130	4	Bolt, Carriage
13	<u>1623-548</u>	2	Screw, Cap	31	8047-426	4	Nut, Lock
14	1602-026	1	Spacer, Clutch - Inner	32	<u>1602-960</u>	1	Chain - 76P
15	1602-020	1	Clutch, Centrifugal	33	<u>1602-975</u>	1	Sprocket, Chain
16	1602-021	1	Band, Brake (inc. 17)	34	0123-019	1	Washer
17	1602-049	1	● Pin, Retainer - Brake Cable	35	<u>1623-549</u>	1	Screw, Cap
18	8050-277	1	Washer	36	1623-129	1	Screw, Self-Tapping

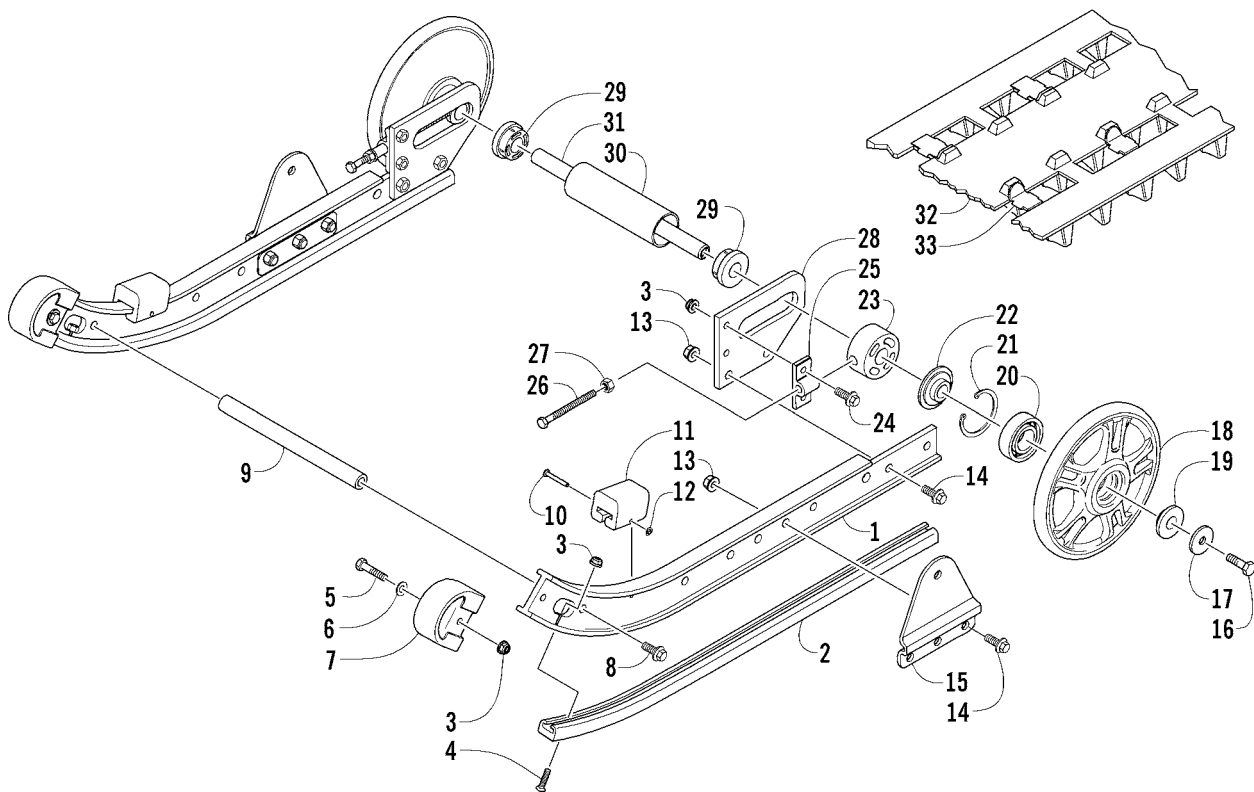


## SLIDE RAIL, IDLER WHEELS, AND TRACK ASSEMBLY

(Complete Skid Frame Assembly p/n 7999-262)

0741-536

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1604-705	2	Rail, Formed	18	2604-122	2	Wheel, Idler - Rear - Yellow (inc. 19-22)
2	1604-568	2	Wearstrip, Slide Rail - Black	19	1604-773	2	● Insert, Idler Wheel - Outer
3	8047-366	8	Nut, Lock	20	0107-598	2	● Bearing
4	0123-869	2	Screw, Machine	21	0123-798	2	● Ring, Retaining
5	8002-043	2	Screw, Cap	22	1604-772	2	● Insert, Idler Wheel - Inner
6	8050-217	2	Washer	23	0604-165	2	Bushing, Idler Wheel - Adjustment - Rear
7	0604-231	2	End Cap, Slide Rail	24	8020-040	4	Screw, Cap
8	1623-566	2	Screw, Cap	25	0604-206	2	Adjuster, Track
9	1604-566	1	Axle, Cross-Brace	26	0124-310	2	Screw, Cap
10	0123-767	2	Rivet, Solid	27	8042-486	2	Nut
11	0104-631	2	Pad, Shock	28	1604-661	2	Housing, Axle - Rear
12	0423-090	2	Nut, Press	29	0604-968	2	Bushing, Spacer - Idler Wheel - Rear
13	8047-426	10	Nut, Lock	30	1604-563	1	Spacer, Idler Wheel - Rear
14	8020-131	10	Screw, Cap	31	1604-562	1	Axle, Idler Wheel - Rear
15	0704-896	2	Bracket, Support - Arm	32	1602-015	1	Track Assembly (inc. 33)
16	1623-427	2	Screw, Cap	33	1602-079	32	● Clip, Guide
17	0123-570	2	Washer				




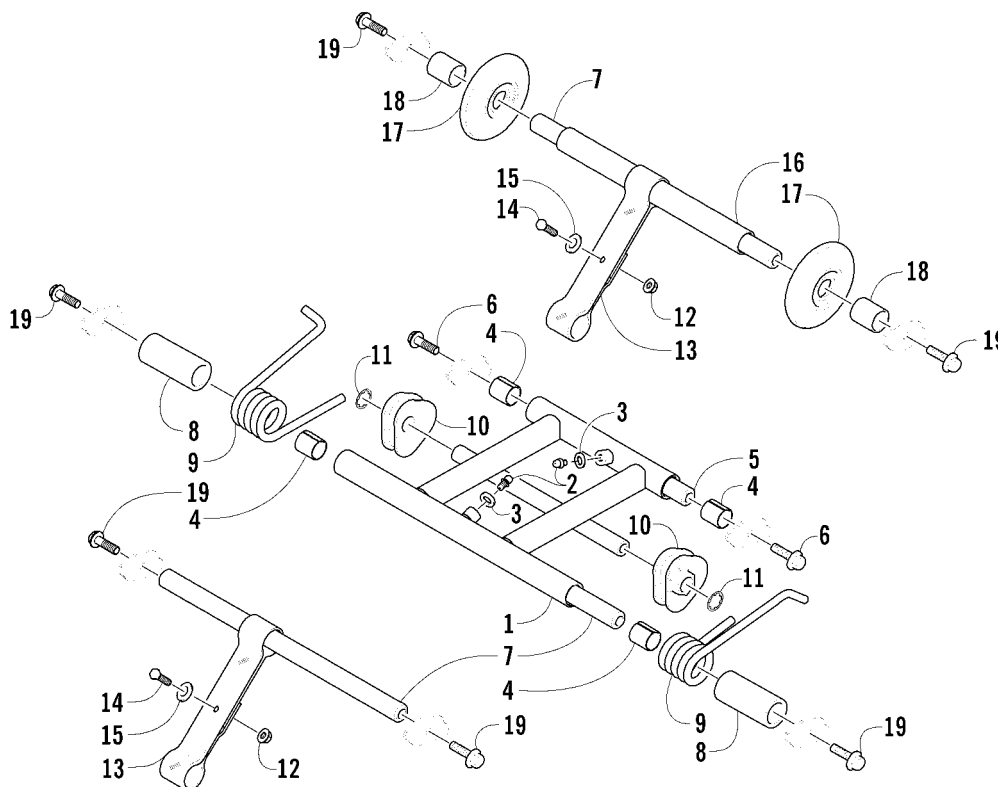

## REAR SUSPENSION ARM ASSEMBLY

0741-537


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1704-287	1	Arm, Rear Suspension (inc. 2-4)	11	0623-138	2	Ring, Retaining
2	1623-010	2	● Fitting, Grease	12	8047-366	2	Nut, Lock
3	1623-011	2	● Washer, Grease Fitting	13	1604-708	2	Strap, Limiter
4	0603-083	4	● Bearing	14	8002-042	2	Screw, Cap
5	1604-710	1	Axle, Rear Suspension Arm - Lower	15	8050-222	2	Washer
6	1623-566	2	Screw, Cap	16	1604-564	1	Spacer
7	1604-673	3	Axle, Idler	17	0300-180	2	Wheel, Idler
8	1604-715	2	Sleeve, Spring	18	1604-565	2	Spacer
9	0704-894	1	Spring, Rear Suspension - Right	19	8020-131	6	Screw, Cap
	0704-895	1	Spring, Rear Suspension - Left				
10	1604-204	1	Block, Spring Adjuster - Right				
	1604-205	1	Block, Spring Adjuster - Left				

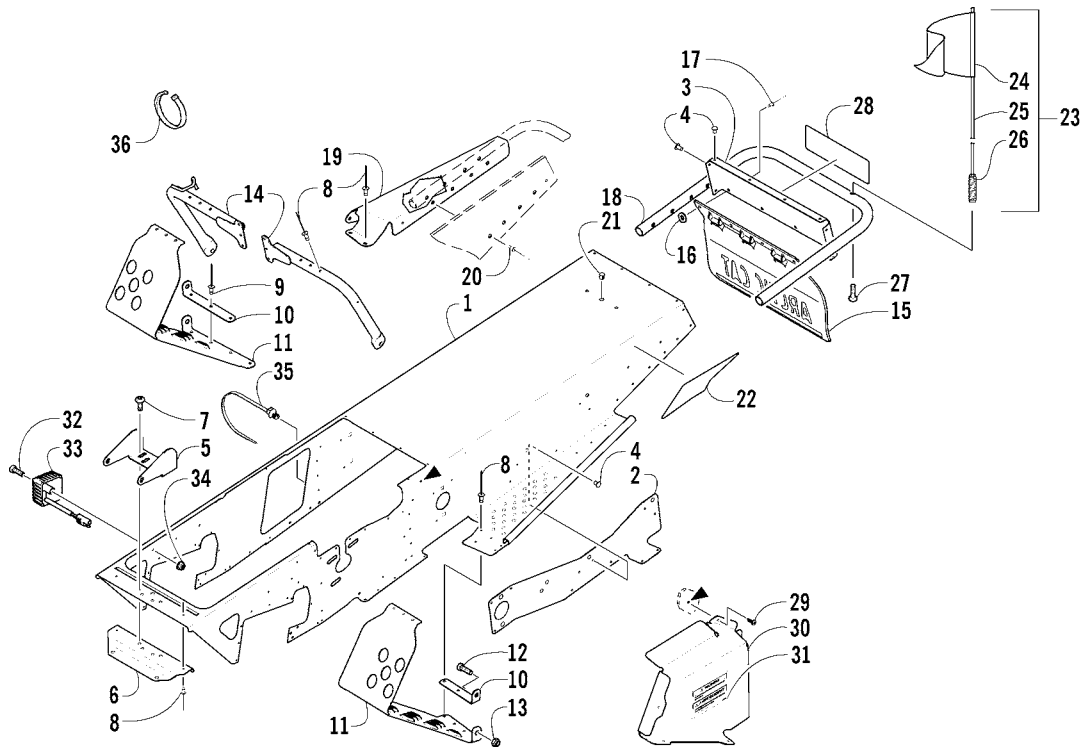

## CHASSIS, FOOTREST, AND REAR BUMPER ASSEMBLY

0741-538


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	1718-900	1	Tunnel Assembly (inc. 2-4)	18	3706-006	1	Bumper, Rear - Black
2	2706-156	1	● Plate, Reinforcement - Tunnel - Right	19	3606-994	1	End Cap, Rear Bumper - Right
	2706-157	1	● Plate, Reinforcement - Tunnel - Left		3606-995	1	End Cap, Rear Bumper - Left
3	2706-158	1	● Plate, Cover - Tunnel	20	8060-706	8	Rivet, Blind
4	0123-418	26	● Rivet, Solid	21	0623-562	1	Plug, Hole
5	2706-141	1	Bracket, Mounting - Hood - Lower	22	6611-688	1	Decal, Reflector - Right
6	3606-993	1	Plate, Reinforcement		6611-689	1	Decal, Reflector - Left
7	0623-892	4	Screw, Self-Tapping	23	1706-105	1	Flag, Safety - Assembly (inc. 24-27)
8	8060-504	AR	Rivet, Blind	24	1706-104	1	● Flag, Safety
9	8060-506	7	Rivet, Blind	25	1606-954	1	● Pole, Safety Flag
10	2706-180	1	Bracket, Support - Footrest - Right	26	2606-010	1	● Mounting, Safety Flag - Assembly
	2706-181	1	Bracket, Support - Footrest - Left	27	8020-134	1	● Screw, Cap
11	1606-784	1	Footrest - Right	28	7611-559	1	Decal, Rear Bumper
	1606-785	1	Footrest - Left	29	0623-301	4	Screw, Self-Tapping
12	8020-040	2	Screw, Cap	30	2706-217	1	Cover, Sprocket - Driven
13	8041-366	2	Nut, Lock	31	3611-754	1	Decal, Warning - Cover
14	1706-283	1	Support, Footrest - Right	32	8020-045	1	Screw, Cap
	1706-041	1	Support, Footrest - Left	33	0630-001	1	Regulator, Voltage
15	1606-750	1	Snowflap	34	8047-366	1	Nut, Lock
16	0123-802	4	Washer	35	0623-677	2	Cable Tie, Push-Mount
17	8060-628	4	Rivet, Blind	36	0123-788	1	Cable Tie

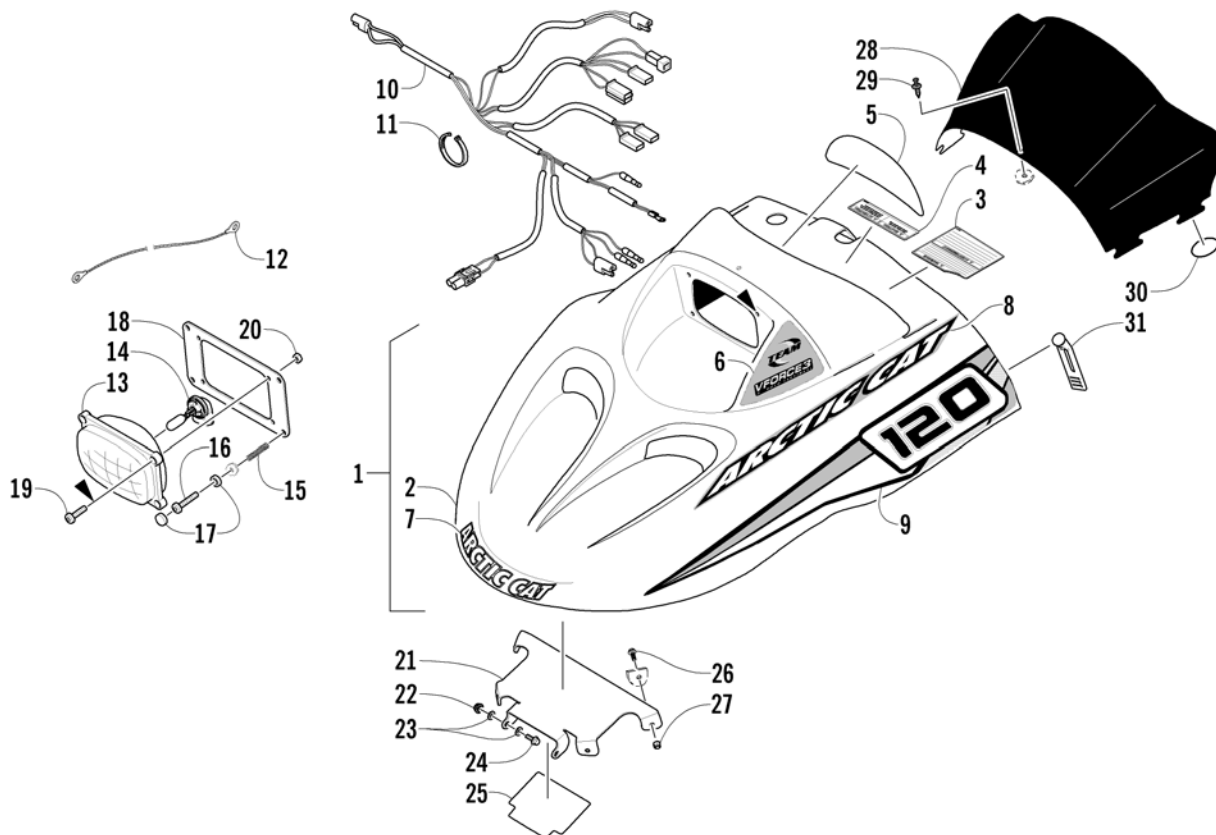

## HOOD, HEADLIGHT, AND WINDSHIELD ASSEMBLY

0741-539R


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>2718-003</u>	1	Hood w/Decals - Green (inc. 2-9)	11	0123-788	AR	Cable Tie - 7 in.
	<u>2718-012</u>	1	Hood w/Decals - Orange (inc. 2-9) (Orange)	12	2606-247	1	Cable, Hood
2	<u>2718-002</u>	1	● Hood w/o Decals - Green (inc. 3-4)	13	<u>0609-817</u>	1	Headlight Assembly (inc. 14)
	<u>2718-011</u>	1	● Hood w/o Decals - Orange (inc. 3-4) (Orange)	14	0609-251	1	● Bulb, Headlight
3	3611-755	1	●● Decal, Caution - Throttle	15	0123-614	4	Spring, Adjustment Screw
4	3611-678	1	●● Decal, Caution - Hood	16	8019-407	4	Screw, Adjustment
5	<u>7611-522</u>	1	● Decal, Instrument Panel	17	0124-054	4	Snap Cap w/Washer
	<u>7611-503</u>	1	● Decal, Instrument Panel (Orange)	18	<u>3706-719</u>	1	Plate, Adapter - Headlight
6	<u>7611-518</u>	2	● Decal, Hood - Windshield	19	8019-397	4	Screw, Machine
	<u>7611-506</u>	2	● Decal, Hood - Windshield (Orange)	20	8041-246	4	Nut, Hex
7	7611-072	1	● Decal, "Arctic Cat"	21	2706-140	1	Bracket, Mounting - Hood - Upper
8	<u>7611-516</u>	1	● Decal, Hood - Upper Right	22	8047-366	2	Nut, Lock
	<u>7611-517</u>	1	● Decal, Hood - Upper Left	23	1623-011	4	Washer
	<u>7611-504</u>	1	● Decal, Hood - Upper Right (Orange)	24	8020-039	2	Screw, Cap
	<u>7611-505</u>	1	● Decal, Hood - Upper Left (Orange)	25	<u>7611-592</u>	1	Decal, Jet Chart
9	<u>7611-520</u>	1	● Decal, Hood - Lower Right	26	0623-902	4	Screw, Hex Washer Head
	<u>7611-521</u>	1	● Decal, Hood - Lower Left	27	1623-023	4	Nut, Lock
	<u>7611-508</u>	1	● Decal, Hood - Lower Right (Orange)	28	<u>4606-411</u>	1	Windshield
	<u>7611-509</u>	1	● Decal, Hood - Lower Left (Orange)	29	0623-243	1	Clip, Retaining
10	<u>1686-353</u>	1	Harness, Wiring - Main	30	0616-032	4	O-Ring, Windshield
				31	1606-930	2	Strap, Hold-Down

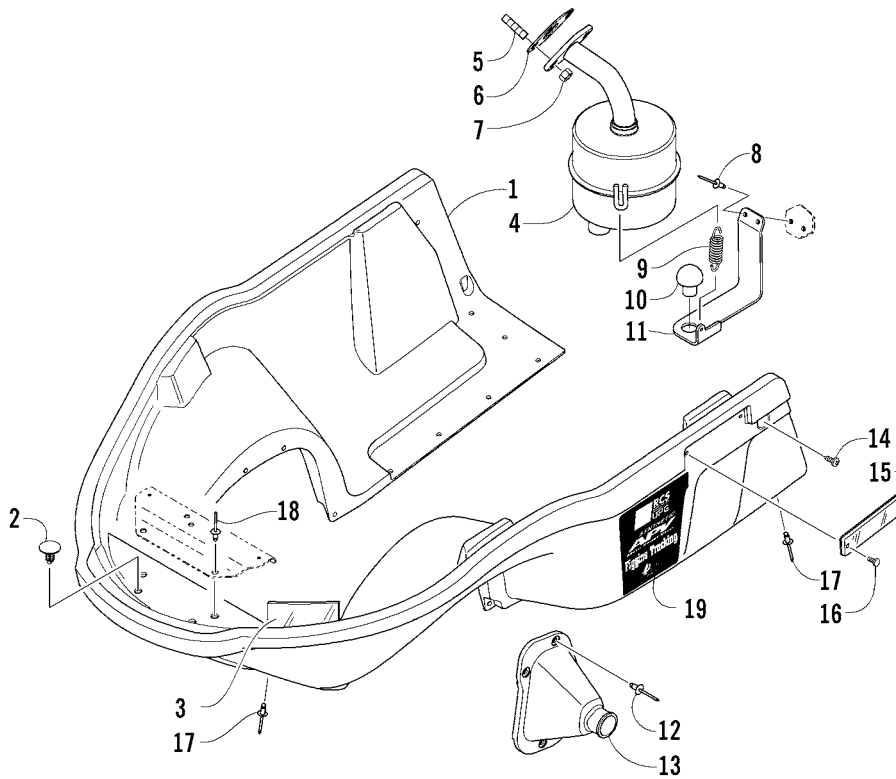

## BELLY PAN AND EXHAUST ASSEMBLIES

0741-541


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	3706-072	1	Belly Pan - Black (inc. 2)	12	8060-508	8	Rivet
2	0623-544	2	● Clip, Retaining	13	0605-464	1	Boot, Tie Rod - Right
3	0619-206	AR	Tape, Foil		0605-465	1	Boot, Tie Rod - Left
4	0712-937	1	Muffler	14	1623-129	2	Screw, Self-Tapping
5	0693-317	2	Bolt, Stud	15	0606-526	2	Reflector, Front - Amber
6	0691-852	1	Gasket, Exhaust	16	0623-269	4	Clip, Retaining
7	3004-326	2	Nut	17	8061-508	22	Rivet
8	8060-504	2	Rivet, Blind	18	0623-778	2	Rivet
9	0123-321	1	Spring, Extension	19	7611-512	1	Decal, Belly Pan - Right
10	0612-111	1	Bumper, Molded - Rubber		7611-513	1	Decal, Belly Pan - Left
11	0712-914	1	Bracket, Muffler Support				

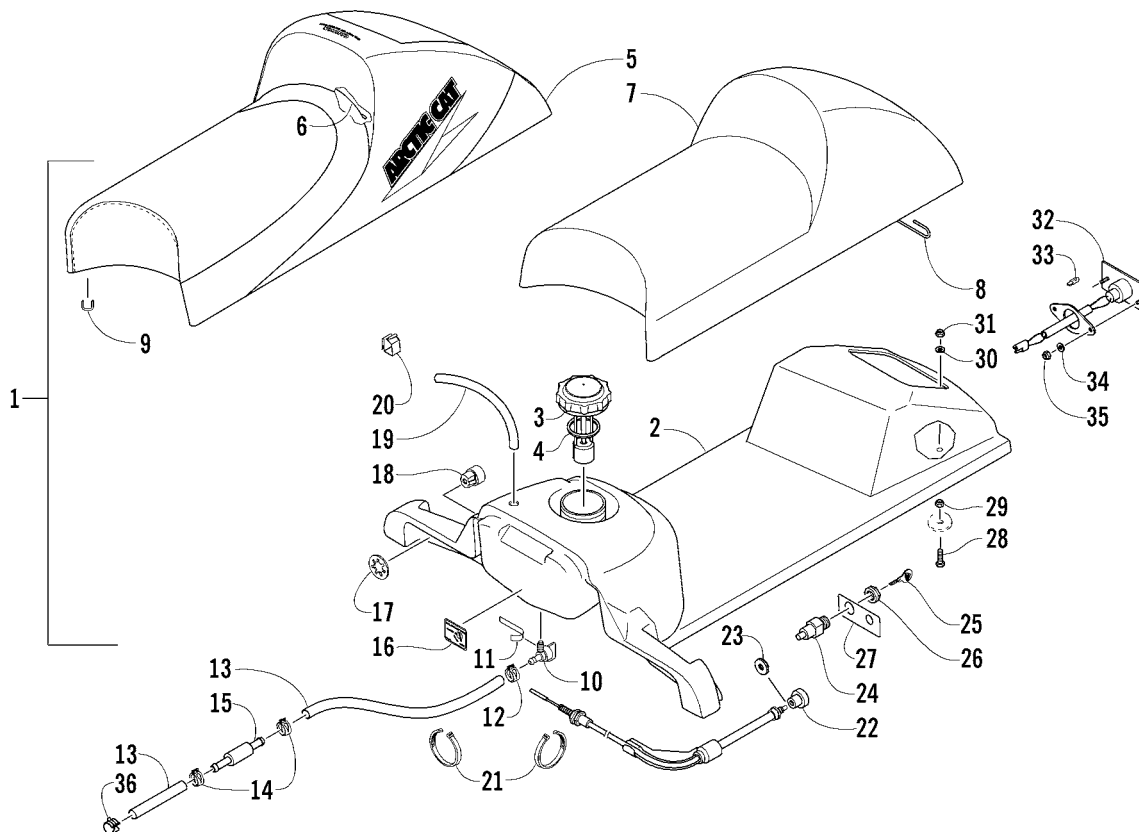

## GAS TANK, SEAT, AND TAILLIGHT ASSEMBLY

0741-545


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	<u>2718-040</u>	1	Complete Seat Assembly (inc. 2-9)	17	0123-579	1	Nut, Push
	<u>2718-041</u>	1	Complete Seat Assembly (inc. 2-9) (Orange)	18	0116-469	1	Bushing, Recoil Starter
2	2606-844	1	● Tank, Gas/Seat-Base	19	1670-647	1	Hose, Vent
3	1670-694	1	● Cap, Gas Tank w/Gauge (inc. 4)	20	0123-394	1	Clip, Cable
4	0109-733	1	●● Seal, Tank Cap	21	0123-788	4	Cable Tie - 7 in.
5	<u>3706-520</u>	1	● Cover, Seat (inc. 6)	22	0687-154	1	Cable, Choke (inc. 23)
	<u>3706-374</u>	1	● Cover, Seat (inc. 6) (Orange)	23	0687-181	1	● Nut, Choke Cable
6	2606-031	1	●● Wire, Seat	24	0109-822	1	Switch, Ignition (inc. 25-26)
7	1706-017	1	● Foam, Seat	25	0116-065	2	● Key
8	2606-942	1	● Wire, Seat	26	0609-111	1	● Nut, Retaining
9	0624-528	AR	● Staple, Seat Cover	27	4611-767	1	Decal, Switch/Choke
10	0676-017	1	Valve, Shut-Off - Gas Tank	28	8002-040	2	Screw, Cap
11	0670-289	AR	Tape, Teflon	29	8040-366	2	Nut, Lock
12	1623-351	1	Clamp, Hose	30	0623-184	2	Washer
13	6101-001	AR	Hose, Gasline/Vent - 100 ft	31	0123-108	2	Nut, Nylon Cap
	6101-009	AR	Hose, Gasline/Vent - 50 ft	32	0609-070	1	Taillight Assembly (inc. 33)
14	1623-042	2	Clamp, Hose	33	0230-020	1	● Bulb, Taillight
15	0510-335	1	Filter, Fuel	34	8050-157	2	Washer
16	3611-856	1	Decal, Shut-Off Valve	35	0123-709	2	Nut w/Lock Washer
				36	1623-233	1	Clamp, Hose

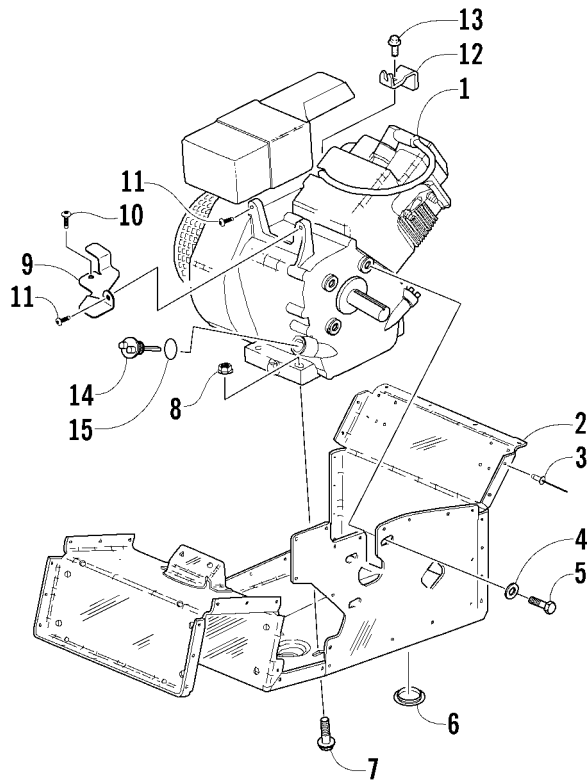

## ENGINE AND RELATED PARTS

0740-341


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0662-336	1	Engine, AA12A2	9	4606-028	1	Cover, Governor
2	3706-775	1	Front End	10	0623-786	1	Screw, Self-Tapping
3	8060-504	AR	Rivet	11	0623-966	2	Screw, Self-Tapping
4	8050-247	1	Washer	12	0770-617	1	Bracket, Throttle Cable
5	1623-550	1	Screw, Cap	13	3004-987	1	Screw, Cap
6	0623-822	5	Plug	14	0694-003	1	Stick, Oil Level
7	8020-134	4	Screw, Cap	15	0693-298	1	O-Ring
8	8047-426	4	Nut, Lock				

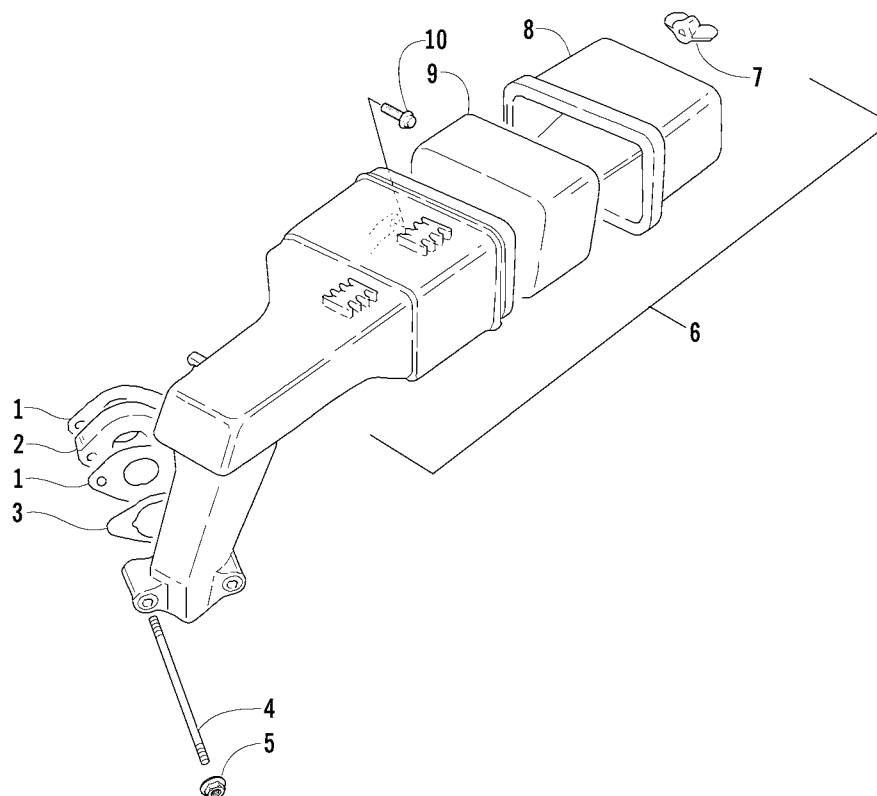

## AIR CLEANER ASSEMBLY

0739-446

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0693-282	2	Gasket, Carburetor	6	0693-543	1	Cleaner, Air - Assembly (inc. 7-9)
2	0691-850	1	Insulator, Carburetor	7	0693-542	1	● Nut, Wing
3	0693-287	1	Gasket, Air Cleaner	8	0691-851	1	● Cover, Air Cleaner
4	0693-364	2	Bolt, Stud	9	0691-736	1	● Filter, Air Cleaner
5	3004-488	2	Nut	10	0693-307	1	Bolt

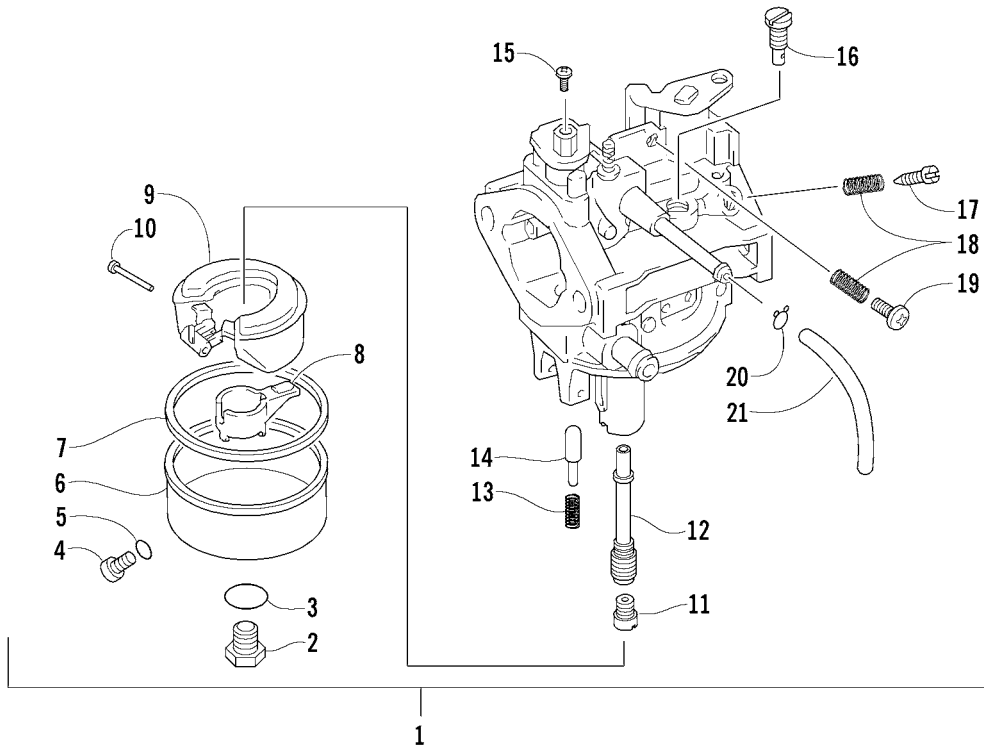


# CARBURETOR

0739-450 \*Optional

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-028	1	Carburetor Assembly (inc. 2-21)	14	0693-055	1	● Needle Jet
2	0693-697	1	● Plug, Drain	15	0694-025	1	● Screw
3	0691-624	1	● Gasket, Drain Plug	16	0694-033	1	● Pilot Jet (42.5)
4	0693-284	1	● Screw, Drain		0693-538	1	● Pilot Jet (37.5)*
5	0693-285	1	● Gasket, Drain Screw		6506-261	1	● Pilot Jet (45)*
6	0693-283	1	● Chamber, Float		6506-262	1	● Pilot Jet (47.5)*
7	0691-423	1	● Gasket, Float Chamber		6506-263	1	● Pilot Jet (50)*
8	0691-426	1	● Ring	17	0691-102	1	● Adjuster Screw, Pilot Air
9	0691-424	1	● Float	18	0691-272	2	● Spring
10	0693-536	1	● Pin, Float	19	0693-315	1	● Adjuster Screw, Idle Speed
11	0694-032	1	● Main Jet (77.5)	20	0694-011	1	● Clamp, Hose
12	0693-056	1	● Nozzle	21	0694-012	1	● Hose, Gasline
13	0691-428	1	● Spring, Needle Jet				




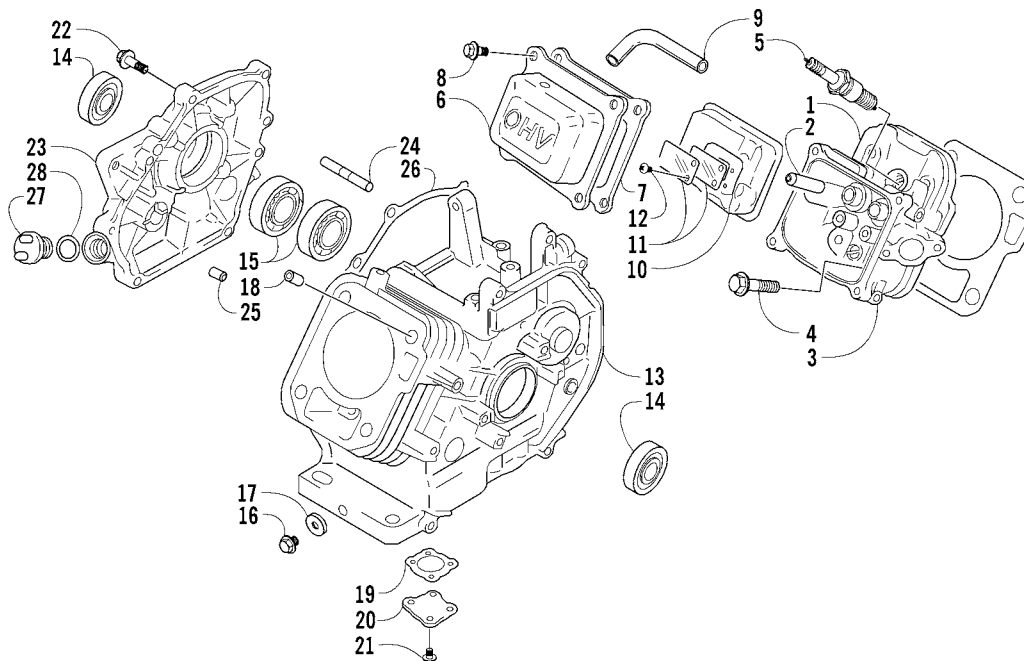

## CYLINDER AND CRANKCASE

0739-487


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-034	1	Head, Cylinder (inc. 2)	15	0691-374	2	● Bearing
2	0691-545	2	● Guide, Valve	16	0693-253	2	● Plug
3	0691-386	1	Gasket, Cylinder Head	17	3002-276	2	● Gasket
4	0693-303	4	Bolt	18	3008-199	2	Pin, Dowel
5	0217-703	1	Plug, Spark (BPR6ES)	19	0691-837	1	Gasket, Engine Oil Level Sensor
6	0691-830	1	Cover, Cylinder Head	20	0694-022	1	Cover, Oil Level Sensor
7	0691-387	1	Gasket, Cylinder Head Cover	21	0693-307	4	Bolt
8	0693-241	4	Bolt	22	0694-035	7	Bolt
9	0693-362	1	Hose, Air Breather	23	0694-002	1	Cover, Crankcase - Assembly - Side (inc. one No. 14-15 and 24)
10	0691-393	1	Body, Air Breather - Assembly (inc. 11-12)	24	0691-844	1	● Shaft, Governor Gear
11	0693-226	1	● Valve, Reed - Set	25	3005-206	2	Pin, Dowel
12	0693-305	2	● Screw	26	0691-834	1	Gasket, Crankcase
13	0694-001	1	Cylinder Assembly (inc. one No. 14-15 and 16-17)	27	0694-004	1	Plug, Engine Oil Drain - Assembly (inc. 28)
14	0691-376	2	● Seal, Oil	28	0693-298	1	● O-Ring

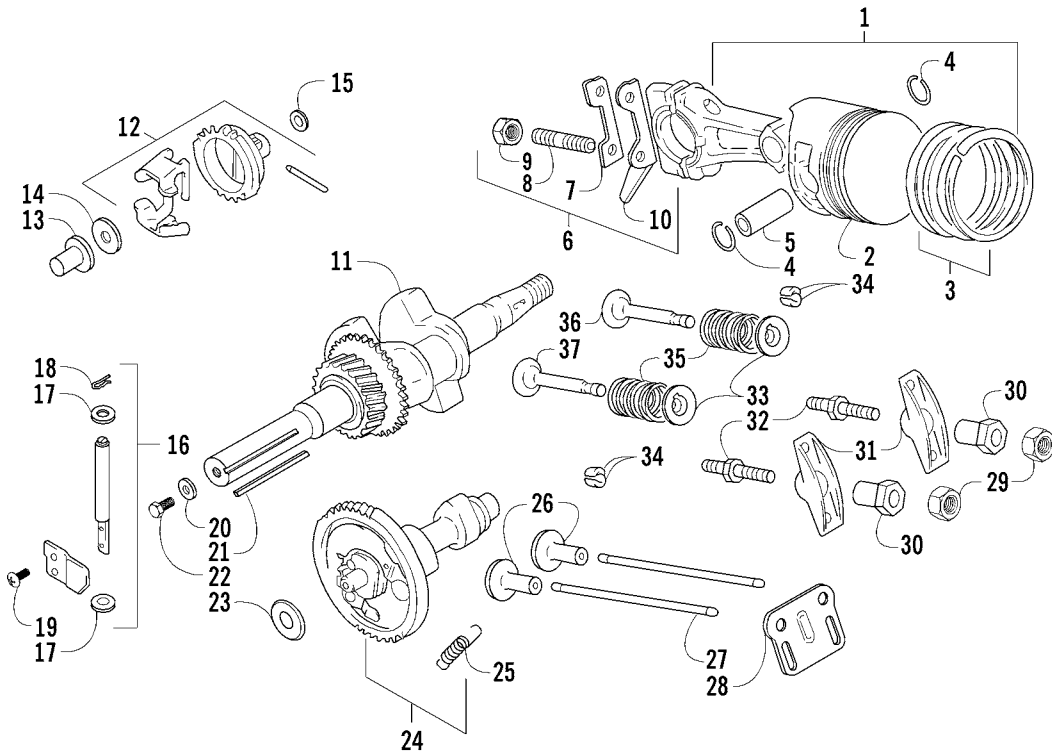

## PISTON AND CRANKSHAFT

0739-493 \*Optional


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-026	1	Piston Assembly (inc. 2-4)	18	0691-848	1	● Clip, Hairpin
2	0691-398	1	● Piston	19	3004-563	2	● Screw
	0691-569	1	● Piston, Oversized (0.25 mm)*	20	0694-024	1	Washer
	0691-570	1	● Piston, Oversized (0.50 mm)*	21	0694-006	1	Key, Crankshaft
3	0691-399	1	● Ring, Piston - Set	22	0694-007	1	Bolt, Crankshaft
	0691-571	1	● Ring, Piston - Set - Oversized (0.25 mm)*	23	0691-840	1	Washer
	0691-572	1	● Ring, Piston - Set - Oversized (0.50 mm)*	24	0691-914	1	Camshaft (inc. 25)
4	0691-378	2	● Circlip	25	0691-380	1	● Spring
5	0691-400	1	Pin, Piston	26	0691-406	2	Tappet
6	0691-936	1	Rod, Connecting - Assembly (inc. 7-10)	27	0691-407	2	Rod, Push
7	0691-403	1	● Plate, Lock	28	0691-415	1	Guide, Push Rod
8	0691-366	2	● Bolt, Stud	29	0691-016	2	Nut
9	3004-851	2	● Nut	30	0691-413	2	Pivot
10	0691-402	1	● Plate, Splash	31	0691-412	2	Arm, Rocker
11	0694-027	1	Crankshaft Assembly	32	0694-037	2	Bolt, Stud - Pivot
12	0693-698	1	Gear, Governor - Set	33	0693-313	2	Retainer, Valve Spring
13	0691-842	1	Slider, Governor	34	0693-281	4	Cotter, Valve
14	0691-843	1	Washer	35	0694-036	2	Spring, Valve
15	3004-652	1	Washer	36	0694-008	1	Valve, Intake
16	0693-258	1	Shaft, Throttle Control - Set (inc. 17-19)	37	0694-009	1	Valve, Exhaust
17	0693-252	2	● Washer				

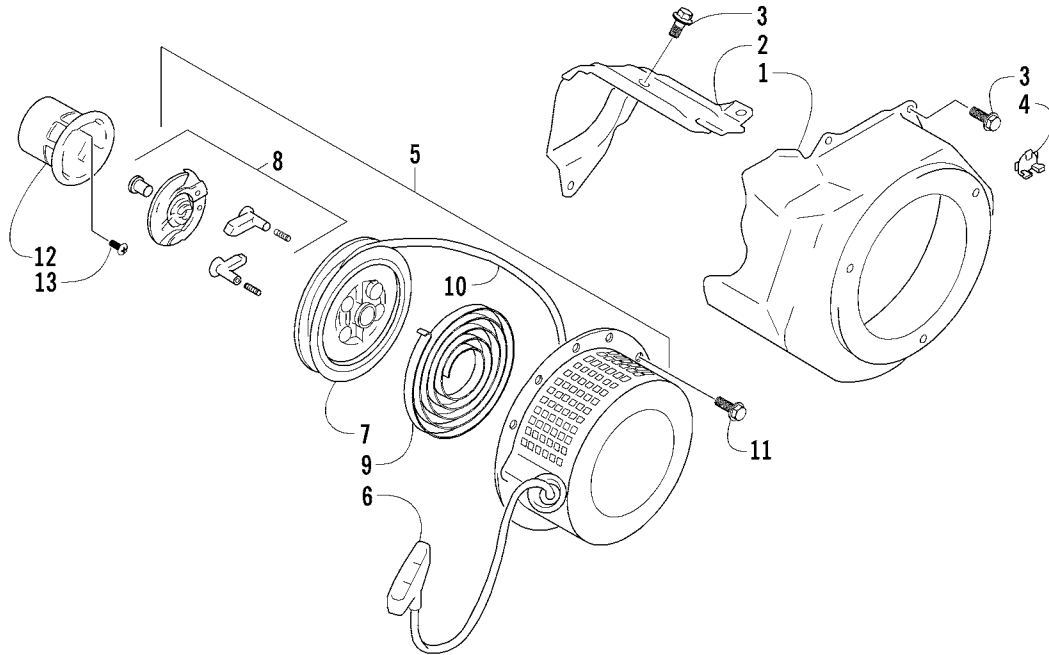

## RECOIL STARTER

0739-495


Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-013	1	Cover, Ventilation Cowling	8	0693-256	1	● Ratchet Set
2	0691-853	1	Cowling, Ventilation	9	3005-162	1	● Spring, Spiral
3	0693-241	7	Bolt	10	3004-856	1	Rope
4	0691-122	1	Protector, Lead Wire	11	0693-246	3	Bolt
5	0694-014	1	Starter, Recoil - Assembly (inc. 6-9)	12	0691-863	1	Pulley, Starter
6	0693-257	1	● Grip Assembly	13	3004-423	3	Screw
7	0691-856	1	● Reel				

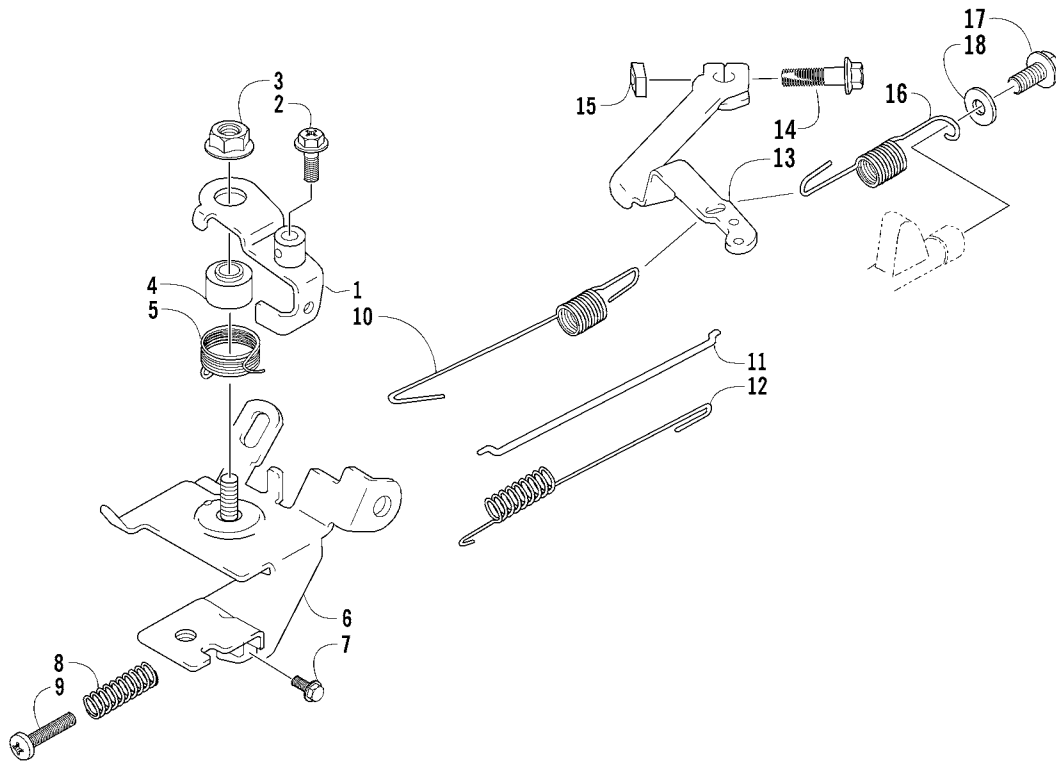

## THROTTLE CONTROL ASSEMBLY

0739-496

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0694-016	1	Lever, Throttle Cable	10	0694-015	1	Spring, Throttle Control
2	3004-987	1	Bolt	11	0694-019	1	Rod, Carburetor
3	3004-351	1	Nut	12	0691-455	1	Spring, Carburetor Rod
4	3002-459	1	Spacer	13	0693-259	1	Lever, Throttle Control (inc. 14-15)
5	0694-038	1	Spring	14	0693-416	1	● Bolt
6	0694-017	1	Bracket, Throttle Control	15	0691-017	1	● Nut
7	0693-241	1	Bolt	16	0623-965	1	Spring
8	0691-901	1	Spring	17	0623-966	1	Screw
9	3004-611	1	Screw	18	8050-217	1	Washer

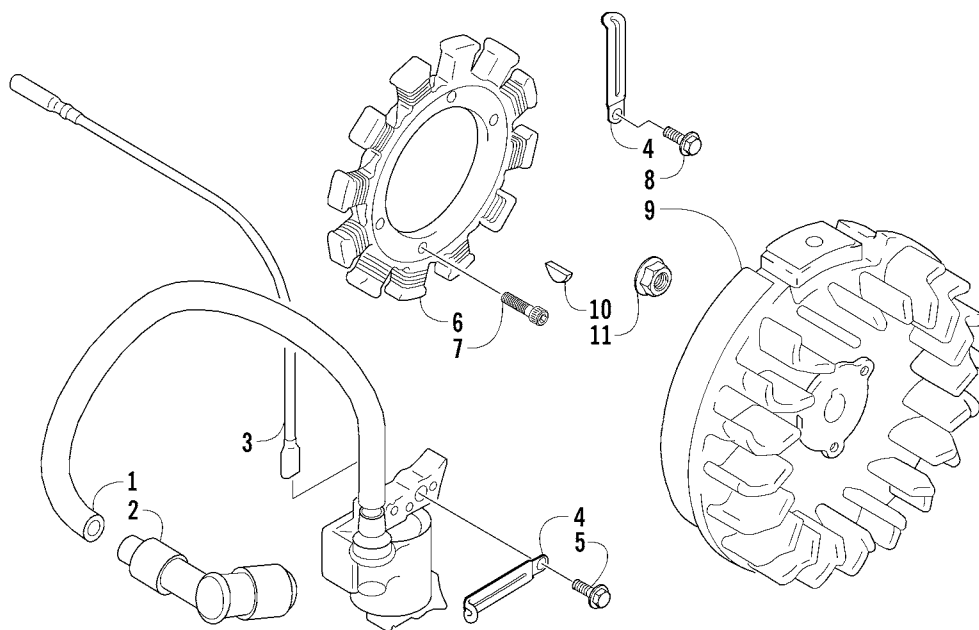

# MAGNETO

0739-497

Ref.	Part No.	Qty.	Description	Ref.	Part No.	Qty.	Description
1	0693-326	1	Coil, Ignition - Assembly	7	0694-023	4	Bolt
2	0691-322	1	Cap, Spark Plug	8	0693-241	1	Bolt
3	0693-263	1	Wire, Magneto Lead	9	0694-030	1	Rotor/Flywheel
4	3002-964	2	Clamp, Wire	10	3004-540	1	Key
5	0693-242	2	Bolt	11	3004-380	1	Nut
6	0694-029	1	Stator				

# RELATED ITEMS

2007 AC 120

(Model No. S2007ACAAAUSG) (Model No. S2007ACAAAUSO)

4639-396	Cover, Machine (Deluxe Coverall)	1639-830	Wearbars, 4 in. Carbide (Pair)
2639-019	Handwarmers	1604-611	Wearstrip - Green
2257-631	Manual, Operator's (E/F)	2639-013	Wheel Kit - Rear Suspension
2257-730	Manual, Illustrated Parts	1639-795	Wheel Kit - Ski
4639-137	Shock Kit (Heavy Duty)	2639-379	Windscreen - Red Flame
1639-831	Studs, Carbide Push-Through (24/pk)		

■ **NOTE:** For a complete list of related items, refer to the current accessory catalog.

